Model AV-1-300 Alarm Valve With and Without Model RC-1 Retard Chamber European Conformity Valve Trim

IMPORTANT
Refer to Technical Data Sheet TFP2300 for warnings pertaining to regulatory and health information.

Scan the QR code or enter the URL in a web browser to access the most up-to-date electronic version of this document. Data rates may apply.

docs.jci.com/tycofire/tfp990

Nominal Valve Sizes	Groove x Groove	Flange x Groove	Flange x Flange
DN65 76,1 mm	10,0 Kg	12,7 Kg	N/A
DN100 114,3 mm	17,2 Kg	21,3 Kg	25,9 Kg
DN150 165,1 mm	26,3 Kg	31,8 Kg	38,1 Kg
DN150 168,3 mm	26,3 Kg	31,8 Kg	38,1 Kg
DN200 219,1 mm	46,3 Kg	54,4 Kg	67,6 Kg

TABLE A
AVAILABLE VALVE END CONNECTIONS AND WEIGHTS

General Description

The TYCO Model AV-1-300 Alarm Valves DN65, DN100, DN150, and DN200 (European Conformity) are divided-seat ring, rubber-faced clapper, waterflow alarm valves that are intended for use in wet pipe (automatic sprinkler) fire protection systems. They are designed to automatically actuate electric and/or hydraulic alarms when there is a steady flow of water into the system that is equivalent to the discharge rate of one or more sprinklers.

An optional Model RC-1 Retard Chamber is required for installations subject to variable pressures. It is used to help prevent false alarms associated with pressure variations in public water supplies.

The Model AV-1-300 Alarm Check Valve Trim includes pressure gauges to monitor system pressure conditions, a by-pass check valve, a main drain valve, and an alarm test valve. The bypass check valve reduces the possibility of false alarms by permitting slow as well as small transient increases in water supply pressure through the system without opening the waterway clapper.

NOTICE

The TYCO Model AV-1-300 Alarm Check Valves and TYCO Model RC-1 Retard Chamber described herein must be installed and maintained in compliance with this document as well as the standards recognized by the Approval agency, in addition to any other authorities having jurisdiction. Failure to do so may impair the performance of these devices.

The owner is responsible for maintaining their fire protection system and devices in proper operating condition. The installing contractor or manufacturer should be contacted with any questions.







NO.	DESCRIPTION	QTY.	P/N
1	Valve Body	1	NR
2	Handhole Cover	1	NR
3	Handhole Cover Gasket	1	See (a)
4	Seat Ring	1	NR
5	Clapper	1	See (b)
6	Clapper Facing	1	See (a) or (b)
7	Clapper Washer	1	See (b)
8	Lock Nut, DN65 Valve	1	See (b)
	Self-Locking Hex Cap Screw, DN100, 150 & 200 Valves	1	See (b)
9	Clapper Hinge Pin	1	See (b)
10	Clapper Hinge Pin Bushing, DN65 Valve	2	NR
	DN100, 150 & 200 Valves	4	NR
11	Clapper Spring	1	See (b)

NO.	DESCRIPTION	QTY.	P/N
12	Handhole Cover Hex Bolt, DN65 Valve, 1/2-13 UNC-2A x 1-1/4" Long	4	CH
	DN100 Valve, 1/2-13 UNC-2A x 1-3/4" Long	4	CH
	DN150 Valve, 1/2-13 UNC-2A x 1-3/4" Long	6	CH
	DN200 Valve, 3/4-10 UNC-2A x 2" Long	6	CH
13	Clapper Hinge Pin Square Head Pipe Plug, 3/8" NPT DN100, 150 & 200 Valves only	1	CH

NO.	DESCRIPTION	P/N
(a)	Repair Parts Kit, Includes 3 & 6	
	DN65 Valve	92-200-1-216
	DN100 Valve	92-200-1-416
	DN150 Valve	92-200-1-620
	DN200 Valve	92-200-1-816
(b)	Clapper Assembly, Includes 5-9, 11	
	DN65 Valve	92-200-1-218
	Includes 5-11	
	DN100 Valve	92-200-1-423
	DN150 Valve	92-200-1-623
	DN200 Valve	92-200-1-823

NOTES:
1. F x F valve shown for reference; components for G x G and F x G valves are shared.
2. NR: Not Replaceable
3. CH: Common Hardware

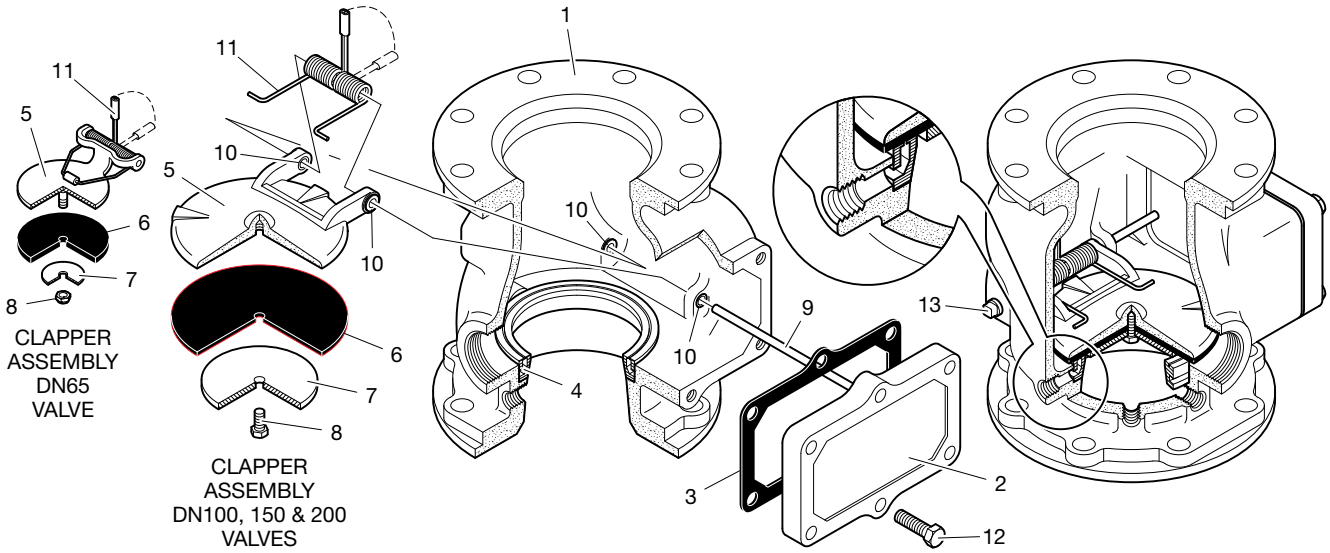


FIGURE 1
DN65, DN100, DN150, & DN200 MODEL AV-1-300 ALARM VALVE ASSEMBLY

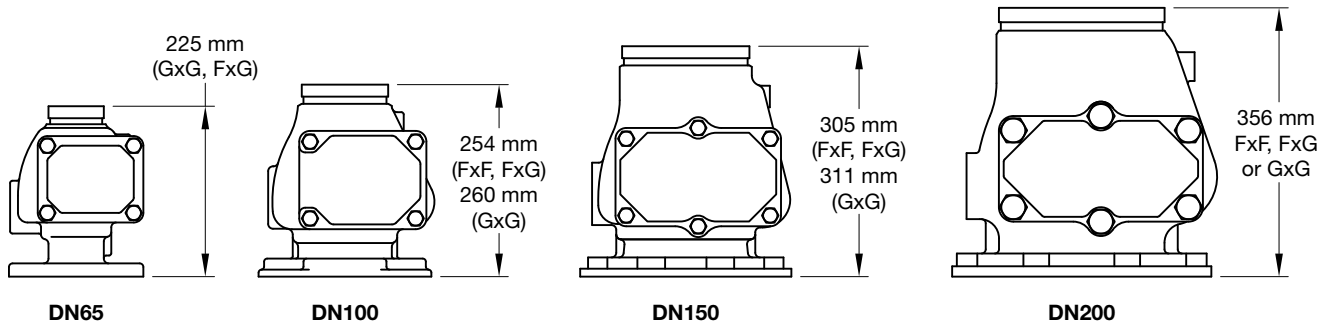


FIGURE 2
DN65, DN100, DN150, & DN200 MODEL AV-1-300 ALARM VALVE TAKE-OUT DIMENSIONS

Technical Data

Sizes
DN65, DN100, DN150, and DN200

Approvals
The TYCO Model AV-1-300 Alarm Valves DN65, DN100, DN150, and DN200 (European Conformity) with or without the Model RC-1 Retard Chamber are FM, VdS, and LPCB Approved as with European Conformity Valve Trim. See Figures 4A to 11B.

For more information on LPCB Approval, contact Johnson Controls at the following office:

Kopersteden 1
7547 TJ Enschede
The Netherlands

Tel: +31-(0)53-428-4444

Fax: +31-(0)53-428-3377

Alarm Valve
The DN65, DN100, DN150, and DN200, Model AV-1-300 Valves with European Conformity Valve Trim are for vertical installations (flow going up), and they are rated for use at a maximum service pressure of 16 bar. Nominal pressure loss versus flow is shown in Graph A, and the valve take-out dimensions are shown in Figure 2.

Flanged connections are drilled per ISO 2084 (PN10/16) or ANSI B16.42 (Class 150), see Table B. Grooved connections, as applicable, are cut in accordance with standard groove specifications for steel pipe. They are suitable for use with grooved end pipe couplings listed or approved for fire protection system service.

Threaded port connections are per ISO 7/1 to readily accept the trim arrangements detailed in Figures 4A through 11B.

Components of the Alarm Valve are shown in Figure 1. The body and Hand-Hole Cover are ductile iron. The Seat Ring is bronze. The Clapper is ductile iron. All valve sizes utilize an EPDM Clapper Facing.

Retard Chamber
The Model RC-1 Retard Chamber is cast iron.

Valve Trim
The Valve Trim is illustrated in Figures 4A through 11B. The Valve Trim forms a part of the laboratory approval of the Model AV-1-300 Alarm Valve and is necessary for the proper operation of the Model AV-1-300 Alarm Valve.

Each package of trim includes the following items:

- Water Supply Pressure Gauge
- System Pressure Gauge
- Main Drain / Alarm Test Valve
- Bypass Check Valve
- Automatic Drain Valve
- Waterflow Pressure Alarm Switch
- Retard Chamber, as applicable

Operating Principles

When the fire protection system is initially being pressurized, water will flow into the system until the water supply and system pressure become equalized, and the Spring closes the Clapper in the Alarm Valve. Once the pressures have stabilized, the Alarm Valve is in service and the centrally located groove in the Seat Ring is sealed. Consequently, with the Alarm Check Valve set for service, there is no flow through the alarm port to the alarm devices (that is, water motor alarm and/or pressure alarm switch).

When there is a steady flow of water into the sprinkler system due to a sprinkler operation, the Clapper opens as shown in Figure 3. Water is then permitted to flow into the centrally located groove in the Seat Ring and out through the alarm port towards the Automatic Drain Valve. When the flow from the alarm port exceeds the drain capacity of the Automatic Drain Valve, the Retard Chamber (where provided in the case of systems with variable pressure), begins to fill as a function of the amount of water that can pass through the Restriction. Subsequently, the water motor alarm and/or the pressure alarm switch will be actuated. The alarms will continue to actuate as long as the Clapper remains opened. Water in the alarm lines will automatically drain out through the Automatic Drain Valve when the Clapper closes (due to discontinuation in the flow of water into the sprinkler system).

In the case of variable pressure systems, slow as well as small transient increases in water supply pressure may continue to build up in the system (via the bypass check valve) without opening the Clapper. A transient surge in supply pressure which is sufficient to only momentarily open the Clapper will not cause a false alarm, and a portion of the increase in pressure will be trapped within the system, thus reducing the possibility of another opening. Any water in the alarm line is automatically drained, further reducing the possibility of a false alarm due to a successive transient surge in supply pressure.

Design Criteria

In planning the installation of the TYCO Model AV-1-300 Alarm Valve, consideration must be given to the disposal of the large quantities of water that may be associated with draining the system or performing a flow test.

The sprinkler system designer must be aware that the configuration of the piping network and its tendency to trap pockets of air (such as in the case of a peaked-roof gridded system) can affect the performance of the alarm system. Although a slight amount of trapped air is desirable to prevent significant pressure increases due to thermally induced expansion of the water, a large quantity of trapped air in a system may result in the possibility of an intermittent alarm.


The possibility of an intermittent alarm condition is a consequence of the fact that the flow out of the system through the test valve or a single sprinkler is very small relative to the flow that can be passed through the valve. This difference increases with valve size. If the system were free of trapped air, flow in would equal flow out and the Clapper would always stabilize at some open position (as needed to accommodate the required flow). With trapped air in the system, however, the Clapper first opens wider since the system initially demands greater flow until the air pockets are compressed (back to nearly the supply pressure), and then it will tend to return closer to the Seat Ring. If the volume of the air pockets is excessive, flow into the system can be momentarily reduced to nearly zero (once the air pockets are compressed) and the Clapper may close, causing flow to the alarms to be shutoff.

Once the Clapper has closed, sufficient water must flow out of the system before the Clapper will again open. A repetition of the above described condition is termed an intermittent alarm.

Using a vent (which can also serve as an end-of-line Inspector's Test Connection) piped from the top of a cross main or end of a branch line at the point most remote from the alarm valve, and filling the system slowly in accordance with the steps described in the Valve Setting Procedure section, can prevent an excessive amount of air from being trapped.


Stop valves upstream and downstream of the alarm valve are required for VdS Approved systems.

Nominal Valve Size DN	Nominal Dimensions mm								
	ANSI B16.42 (Class 150)[1]			ISO2084 (PN10)[2]			ISO2084 (PN16)[3]		
	Dim. A	Dim. B	Qty.	Dim. A	Dim. B	Qty.	Dim. A	Dim. B	Qty.
DN65	139,7	19,0	4	Use ISO 2084 (PN16)			145,0	18,0	4
DN100	190,5	19,0	8				180,0	18,0	8
DN150	241,3	22,0	8				240,0	22,0	8
DN200	298,5	22,0	8	295,0	22,0	8	295,0	22,0	12

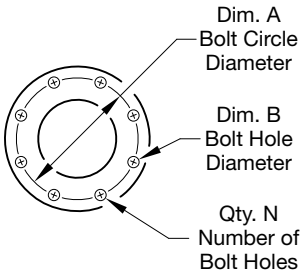

NOTES
1. Flat face flange; Same drilling as for B16.1 (Class 125).
2. Same drilling as for B4504 Section 3.2 (PN10) and DIN2532 (PN10).
3. Same drilling as for B4504 Section 3.2 (PN16) and DIN 2532 (PN16).

TABLE B
MODEL AV-1-300 ALARM VALVE
FLANGE DRILLING SPECIFICATIONS

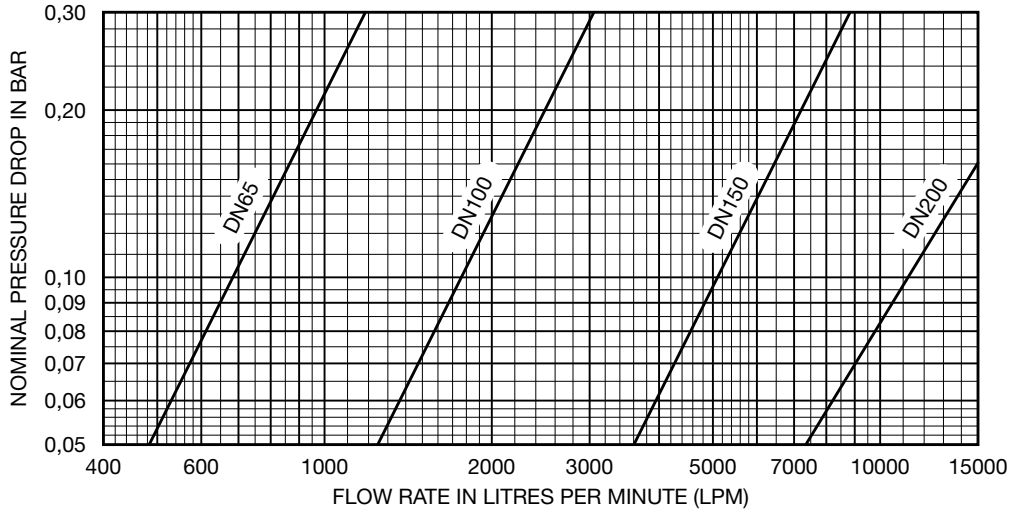

GRAPH A
DN65, DN100, DN150, & DN200 MODEL AV-1-300 ALARM VALVE
NOMINAL PRESSURE LOSS VERSUS FLOW

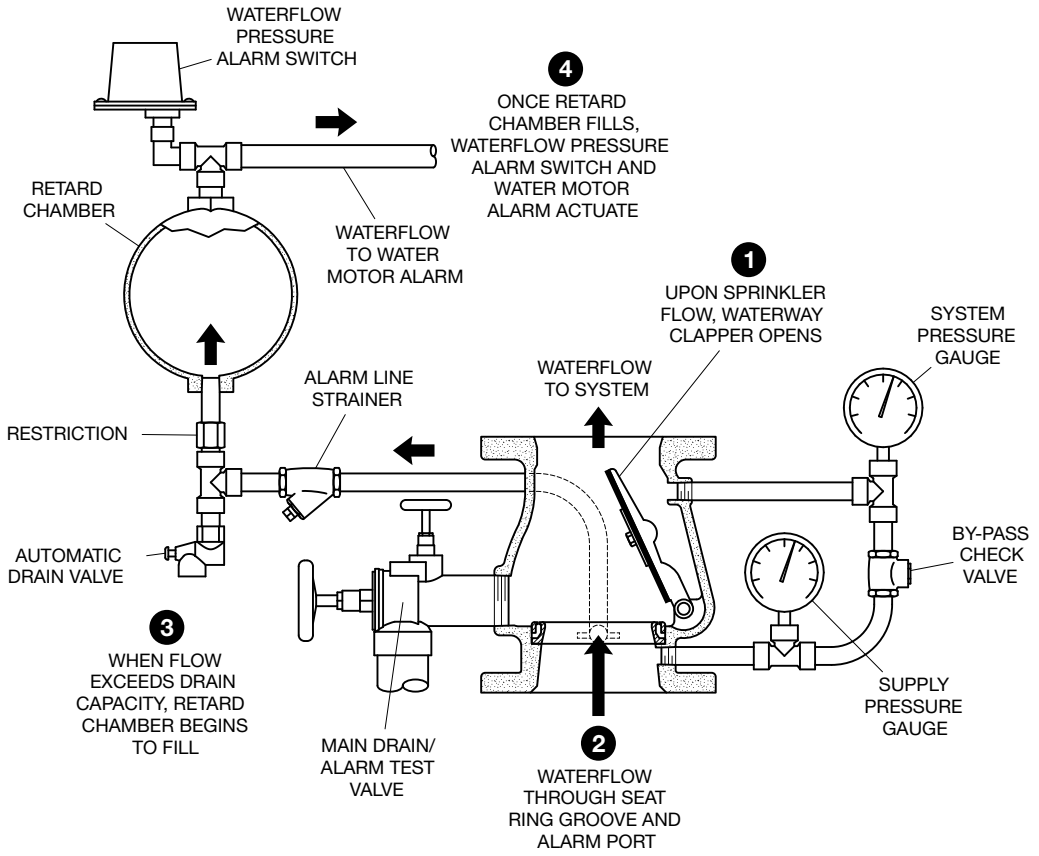


FIGURE 3
DN65, DN100, DN150, & DN200 MODEL AV-1-300 ALARM VALVE OPERATION

Installation

General Instructions

Proper operation of the TYCO Model AV-1-300 Alarm Valves depends upon its trim being installed in accordance with Figures 4A through 11B, as applicable. Failure to follow the appropriate trim diagram may prevent the valve from functioning, may void the Manufacturer's Warranty, and will void listings and approvals.

The Alarm Valves must be installed in readily visible and accessible locations.

It is recommended that provision be made for viewing the alarm line drain water by locating the drain outlet in a readily visible area.

Wet pipe fire protection systems must be maintained at a minimum temperature of 4°C.

When installing the valve in a corrosive environment, including outdoor locations, protection from moisture, chemicals or fumes is highly recommended. Galvanic corrosion can result from joining unprotected dissimilar metals. For example, exposed steel pipe threads can become corroded if unprotected by painting or other coating methods. Where coating such exposed surfaces is impractical or unwanted, construct a rain-resistant roof or enclosure over the valve and trim.

Step 1. When trimming valves in the field (that is, other than valves provided with factory assembled trim), verify all nipples, fittings, and devices are clean and free of scale and burrs before installation. Use pipe-thread sealant sparingly on male pipe threads only.

Step 2. Plug unused alarm connections.

Step 3. Ensure suitable disposal of alarm line and system drainage water. Direct drainage water so that it will not cause damage or result in dangerous conditions.

Step 4. Position the alarm line drain so that there will be no danger of freezing.


Step 5. Install the check valve in the externally mounted bypass around the waterway clapper with its arrow pointed up.

Step 6. It is recommended that a vent connection, which may also be used as an end-of-line Inspector's Test Connection, be piped from a cross main or branch line at the point most remote from the alarm valve. Connect the vent line to the top of a cross main or to the end of a branch line. Position the vent line at the highest level of a multi-level installation.

The vent connection can be used to bleed-off excessive air from the system, and therefore, minimize the possibility of a false alarm due to a transient surge in supply pressure. The contraction/expansion associated with an excessive amount of trapped air could also cause the waterway Clapper to cycle open and shut during an inspector's test or during a discharge by a single sprinkler.

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 80mm Galvanized Steel	2	AP80D2
2	Pipe Nipple, 1/2" x 60mm Galvanized Steel	3	AP60D2
3	Pipe Nipple, 1-1/12" x 100mm Galvanized Steel	1	AP100H2
4	Pipe Nipple, 1/2" x 100mm Galvanized Steel	1	AP100D2
5	Elbow 90° M x F 1/2" BSP Galvanized.	3	A92D2
6	Elbow 45° F x F 1-1/2" BSP Galvanized	1	A41H2
7	Union M x F 1/2" BSP Galvanized	2	A341D2
8	Plug Male 1/4" BSP Galvanized	1	A290B2
9	Nipple Male 1/2" BSP Galvanized	2	A280D2
10	Nipple F x M 2" x 1-1/2" BSP Galvanized	1	A246IH2
11	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
12	Nipple M x F 2" x 1-1/2" BSP Galvanized	1	A241IH2
13	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
14	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
15	Tee M x F 1/2" BSP Galvanized	1	A133D2
16	Reducing Tee Female 1/2" x 1/4" x 1/2" BSP Galvanized	1	A130RDBD2
17	Tee Female 1/2" BSP Galvanized.	1	A130D2
18	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
19	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
20	Alarm Valve Model AV-1-300 2-1/2"/76,1mm G x G	1	522034120
21	Check Valve, Swing Type, 1/2".	1	460491004D
22	Elbow WES 3mm x M5.	2	406012
23	Self-Closing Drain Valve 1/2" Brass	1	2162156
24	Ball Valve, DN15 - 1/2" BSP Full Bore	1	1610000210
25	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
26	Water Pressure Gauge 300 psi / 21 bar	2	025500013
27	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

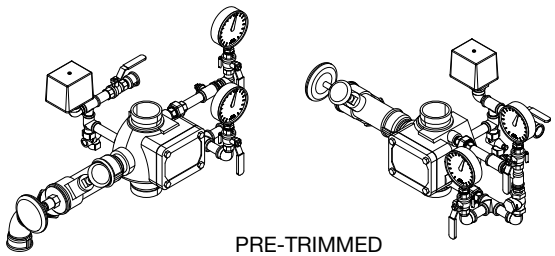

PRE-TRIMMED
VALVE ASSEMBLY


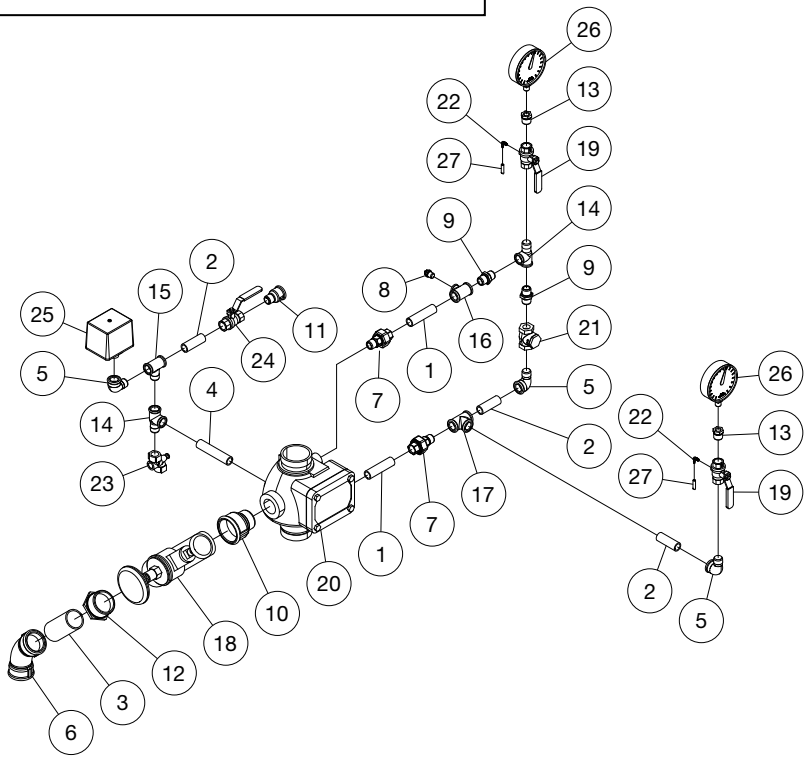


FIGURE 4A
DN65 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 90mm Galvanized Steel	1	AP90D2
2	Pipe Nipple, 1/2" x 80mm Galvanized Steel	1	AP80D2
3	Pipe Nipple, 1/2" x 60mm Galvanized Steel	2	AP60D2
4	Pipe Nipple, 1-1/2" x 100mm Galvanized Steel	1	AP100H2
5	Elbow 90° M x F 1/2" BSP Galvanized	3	A92D2
6	Elbow 45° F x F 1-1/2" BSP Galvanized	1	A41H2
7	Union M x F 1/2" BSP Galvaniz ed	1	A341D2
8	Plug Male 1/4" BSP Galvanized	1	A290B2
9	Nipple Male 1/2" BSP Galvanized	1	A280D2
10	Coupling Female 1/2" BSP Galvanized	1	A270D2
11	Nipple F x M 2" x 1-1/2" BSP Galvanized	1	A246IH2
12	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
13	Nipple M x F 2" x 1-1/2" BSP Galvanized	1	A241IH2
14	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
15	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
16	Tee M x F 1/2" BSP Galvanized	1	A133D2
17	Reducing Tee Female 1/2" x 1/4" x 1/2" BSP Galvanized	1	A130RDBD2
18	Tee Female 1/2" BSP Galvanized	1	A130D2
19	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
20	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
21	Alarm Valve Model AV-1-300 2-1/2"/76,1mm G x G	1	522034120
22	Check Valve, Swing Type, 1/2"	1	460491004D
23	Elbow WES 3mm x M5	2	406012
24	Self-Closing Drain Valve 1/2" Brass	1	2162156
25	Ball Valve, DN15 - 1/2" BSP Full Bore	1	1610000210
26	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
27	Water Pressure Gauge 300 psi / 21 bar	2	025500013
28	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

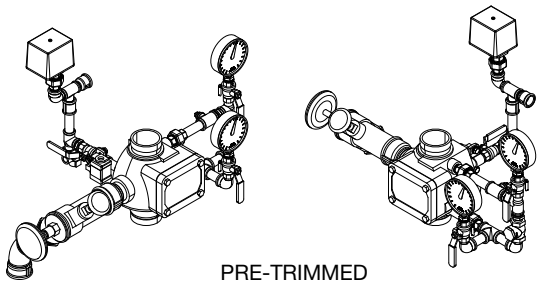

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


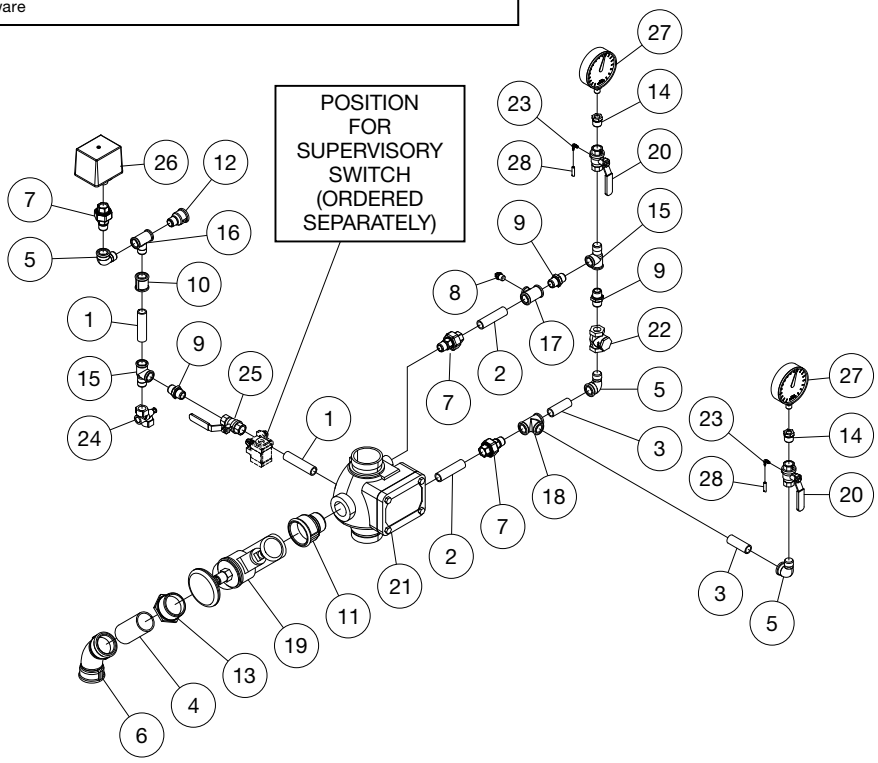


FIGURE 4B
DN65 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 80mm Galvanized Steel	2	AP80D2
2	Pipe Nipple, 1/2" x 60mm Galvanized Steel	3	AP60D2
3	Pipe Nipple, 1/2" x 160mm Galvanized Steel	1	AP160D2
4	Pipe Nipple, 1-1/2" x 100mm Galvanized Steel	1	AP100H2
5	Elbow 90° M x F 1/2" BSP Galvanized.	3	A92D2
6	Elbow 45° F x F 1-1/2" BSP Galvanized	1	A41H2
7	Union M x F 1/2" BSP Galvanized	3	A341D2
8	Plug Male 1/4" BSP Galvanized	1	A290B2
9	Nipple Male 3/4" BSP Galvanized	1	A280E2
10	Nipple Male 1/2" BSP Galvanized	4	A280D2
11	Nipple F x M 2" x 1-1/2" BSP Galvanized	1	A246IH2
12	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
13	Nipple M x F 2" x 1-1/2" BSP Galvanized	1	A241IH2
14	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
15	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
16	Reducing Tee Female 1/2" x 3/4" x 1/2" BSP Galvanized	1	A130RDED2
17	Reducing Tee Female 1/2" x 1/4" x 1/2" BSP Galvanized	1	A130RDBD2
18	Tee Female 1/2" BSP Galvanized.	1	A130D2
19	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
20	Nipple M x F 1/2" x 3,56mm Orifice x 45,5mm	1	700484
21	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	1	59304FO
22	Retarding Chamber RC-1.	1	522111002
23	Alarm Valve Model AV-1-300 2-1/2"/76,1mm G x G	1	522034120
24	Check Valve, Swing Type, 1/2".	1	460491004D
25	Elbow WES 3mm x M5.	2	406012
26	Strainer 1/2" Bronze	1	523531006
27	Self-Closing Drain Valve 1/2" Brass	1	2162156
28	Ball Valve DN15-1/2" BSP Full Bore	1	1610000210
29	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
30	Water Pressure Gauge 300 psi / 21 bar	2	025500013
31	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

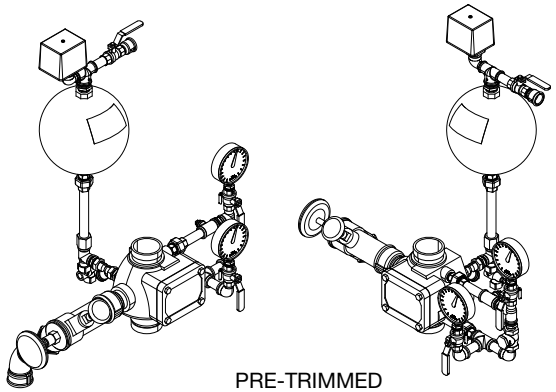

PRE-TRIMMED
VALVE ASSEMBLY


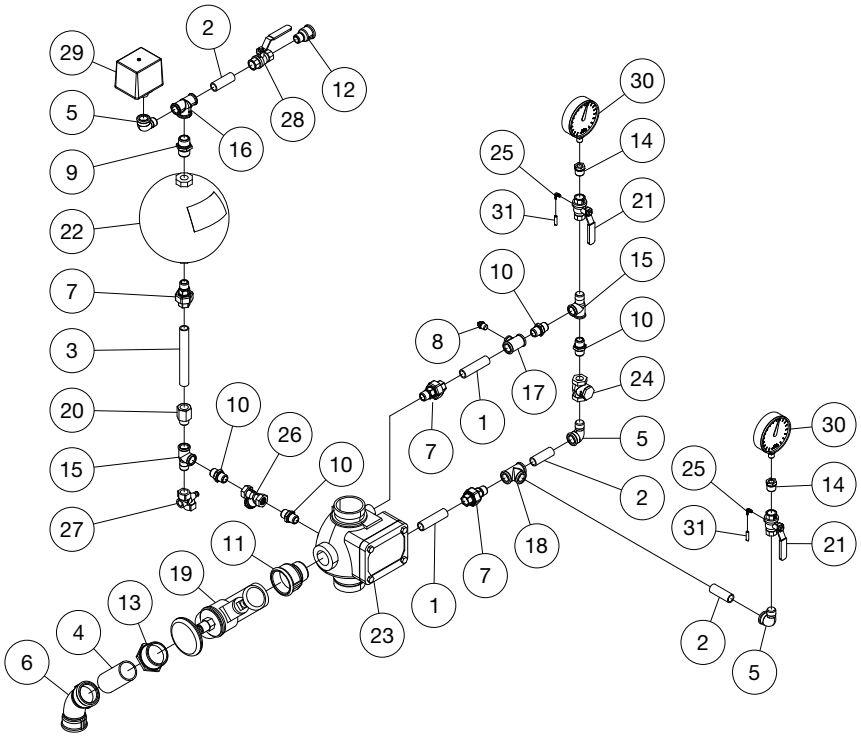


FIGURE 5A
DN65 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pressure Relief Hose 3 x 6 x 1,2m Transparent	1	WS00000004
2	Pipe Nipple, 1/2" x 80mm Galvanized Steel	2	AP80D2
3	Pipe Nipple, 1/2" x 60mm Galvanized Steel	1	AP60D2
4	Pipe Nipple, 1-1/2" x 100mm Galvanized Steel	1	AP100H2
5	Pipe Nipple, 1/2" x 100mm Galvanized Steel	1	AP100D2
6	Elbow 90° M x F 1/2" BSP Galvanized	3	A92D2
7	Elbow 45° F x F 1-1/2" BSP Galvanized	1	A41H2
8	Union M x F 1/2" BSP Galvanized	1	A341D2
9	Plug Male 1/4" BSP Galvanized	1	A290B2
10	Nipple Male 3/4" BSP Galvanized	1	A280E2
11	Nipple Male 1/2" BSP Galvanized	4	A280D2
12	Nipple F x M 2" x 1-1/2" BSP Galvanized	1	A246IH2
13	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
14	Nipple M x F 2" x 1-1/2" BSP Galvanized	1	A241IH2
15	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
16	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
17	Reducing Tee Female 1/2" x 3/4" x 1/2" BSP Galvanized	1	A130RDED2
18	Reducing Tee Female 1/2" x 1/4" x 1/2" BSP Galvanized	1	A130RDBD2
19	Tee Female 1/2" BSP Galvanized	1	A130D2
20	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
21	Nipple M x F 1/2" x 3,56mm Orifice x 45,5mm	1	700484
22	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	1	59304FO
23	Retarding Chamber RC-1	1	522111002
24	Alarm Valve Model AV-1-300 2-1/2"/76,1mm G x G	1	522034120
25	Check Valve, Swing Type, 1/2"	1	460491004D
26	Elbow WES 3mm x M5	1	406012
27	Strainer 1/2" Bronze	1	523531006
28	Self-Closing Drain Valve 1/2" Brass	1	2162156
29	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
30	Water Pressure Gauge 300 psi / 21 bar	2	025500013
31	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

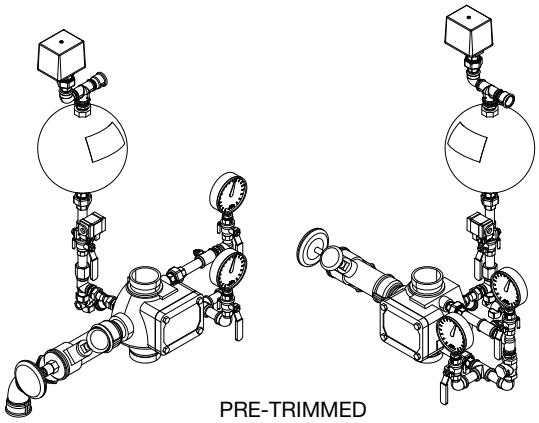

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


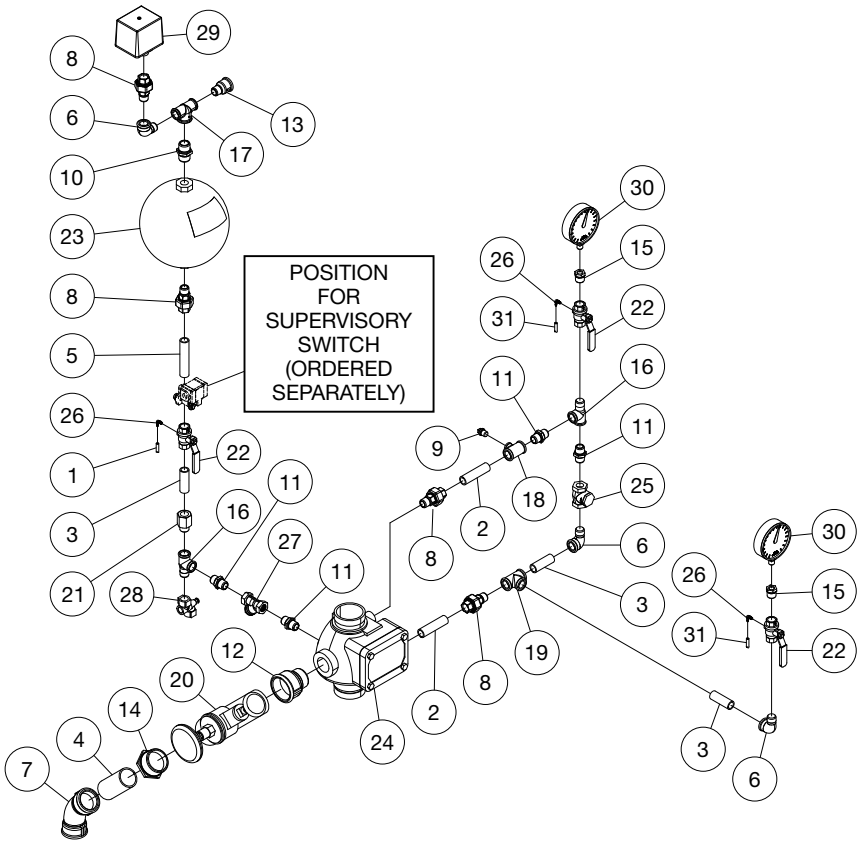


FIGURE 5B
DN65 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 90mm Galvanized Steel	2	AP90D2
2	Pipe Nipple, 1/2" x 60mm Galvanized Steel	2	AP60D2
3	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
4	Pipe Nipple, 1/2" x 120mm Galvanized Steel	2	AP120D2
5	Elbow 90° M x F 1/2" BSP Galvanized.	3	A92D2
6	Union M x F 1/2" BSP Galvanized	3	A341D2
7	Plug Male 1/2" BSP Galvanized	1	A291D2
8	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
9	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
10	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
11	Tee M x F 1/2" BSP Galvanized	1	A133D2
12	Tee M x F 1/2" BSP Galvanized	1	A133D2
13	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
14	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
15	Alarm Valve Model AV-1-300 4"/114,3mm G x G.	1	522031923
16	Check Valve, Swing Type, 1/2".	1	460491004D
17	Elbow WES 3mm x M5.	2	406012
18	Self-Closing Drain Valve 1/2" Brass	1	2162156
19	Ball Valve, DN15 - 1/2" BSP Full Bore	1	1610000210
20	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
21	Water Pressure Gauge 300 psi / 21 bar	2	025500013
22	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

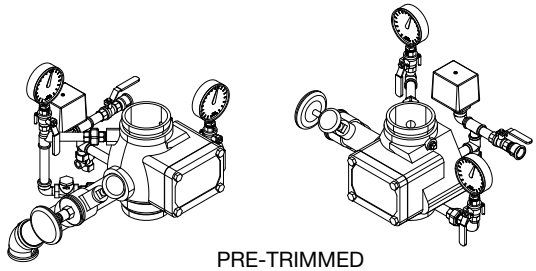

PRE-TRIMMED
VALVE ASSEMBLY


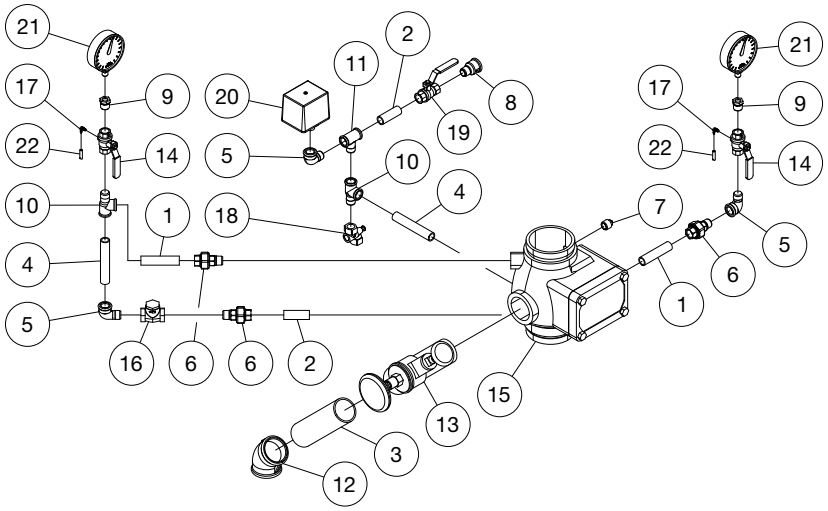


FIGURE 6A
DN100 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 90mm Galvanized Steel	1	AP90D2
2	Pipe Nipple, 1/2" x 80mm Galvanized Steel	1	AP80D2
3	Pipe Nipple, 1/2" x 60mm Galvanized Steel	1	AP60D2
4	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
5	Pipe Nipple, 1/2" x 120mm Galvanized Steel	1	AP120D2
6	Elbow 90° M x F 1/2" BSP Galvanized	3	A92D2
7	Union M x F 1/2" BSP Galvanized	1	A341D2
8	Plug Male 1/2" BSP Galvanized	1	A291D2
9	Nipple Male 1/2" BSP Galvanized	1	A280D2
10	Coupling Female 1/2" BSP Galvanized	1	A270D2
11	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
12	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
13	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
14	Tee M x F 1/2" BSP Galvanized	1	A133D2
15	Elbow 45° F x F 2" BSP Galvanized	1	A120I2
16	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
17	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
18	Alarm Valve Model AV-1-300 4"/114,3mm G x G	1	522031923
19	Check Valve, Swing Type, 1/2"	1	460491004D
20	Elbow WES 3mm x M5	2	406012
21	Self-Closing Drain Valve 1/2" Brass	1	2162156
22	Ball Valve, DN15 - 1/2" BSP Full Bore	1	1610000210
23	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
24	Water Pressure Gauge 300 psi / 21 bar	2	025500013
25	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

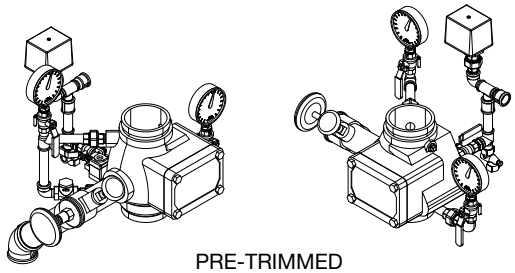

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


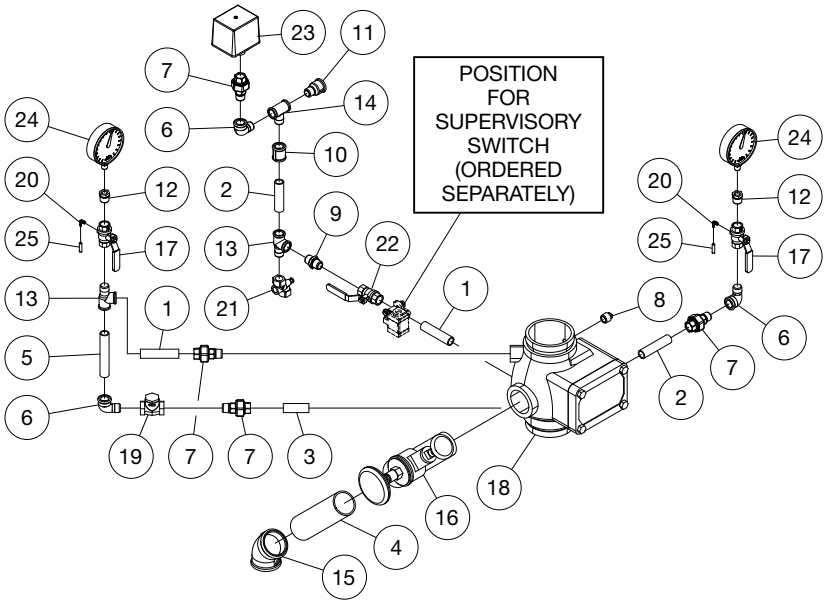


FIGURE 6B
DN100 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 90mm Galvanized Steel	2	AP90D2
2	Pipe Nipple, 1/2" x 60mm Galvanized Steel	2	AP60D2
3	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
4	Pipe Nipple, 1/2" x 200mm Galvanized Steel	1	AP200D2
5	Pipe Nipple, 1/2" x 120mm Galvanized Steel	1	AP120D2
6	Elbow 90° M x F 1/2" BSP Galvanized	3	A92D2
7	Union M x F 1/2" BSP Galvanized	4	A341D2
8	Plug Male 1/2" BSP Galvanized	1	A291D2
9	Nipple Male 3/4" BSP Galvanized	1	A280E2
10	Nipple Male 1/2" BSP Galvanized	2	A280D2
11	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
12	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
13	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
14	Reducing Tee Female 1/2" x 3/4" x 1/2" BSP Galvanized	1	A130RDED2
15	Elbow 45° F x F 2" BSP Galvanized	1	A120I2
16	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
17	Nipple M x F 1/2" x 3,56mm Orifice x 45,5mm	1	700484
18	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
19	Retarding Chamber RC-1	1	522111002
20	Alarm Valve Model AV-1-300 4"/114,3mm G x G	1	522031923
21	Check Valve, Swing Type, 1/2"	1	460491004D
22	Elbow WES 3mm x M5	2	406012
23	Strainer 1/2" Bronze	1	523531006
24	Self-Closing Drain Valve 1/2" Brass	1	2162156
25	Ball Valve DN15-1/2" BSP Full Bore	1	1610000210
26	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
27	Water Pressure Gauge 300 psi / 21 bar	2	025500013
28	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

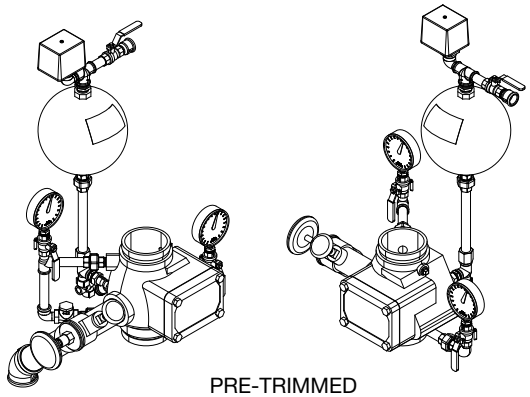

PRE-TRIMMED
VALVE ASSEMBLY


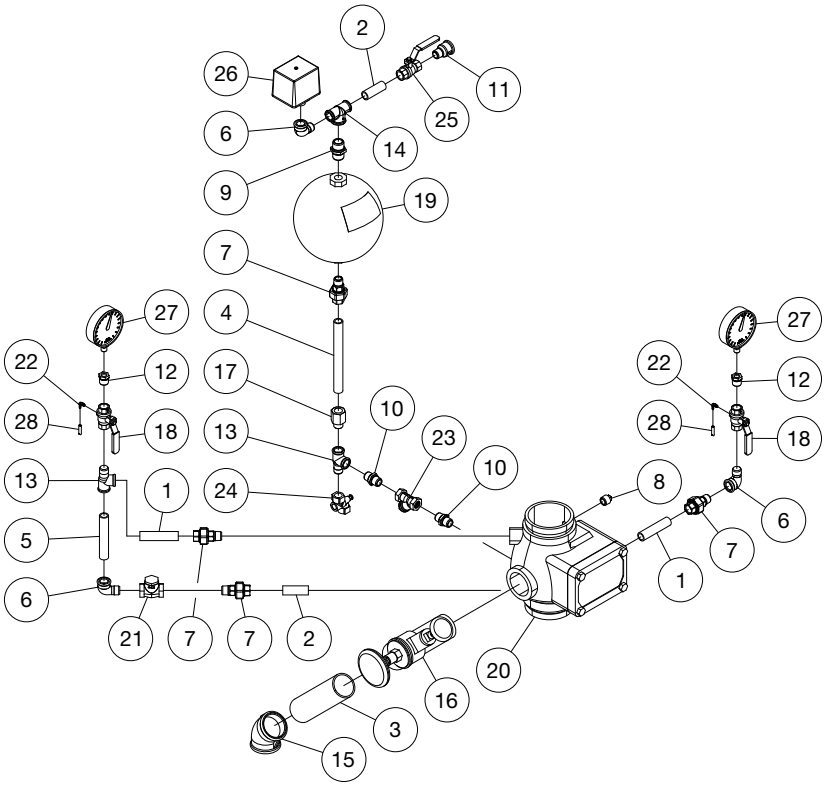


FIGURE 7A
DN100 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pressure Relief Hose 3 x 6 x 1,2m Transparent	1	WS00000004
2	Pipe Nipple, 1/2" x 90mm Galvanized Steel	2	AP90D2
3	Pipe Nipple, 1/2" x 60mm Galvanized Steel	1	AP60D2
4	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
5	Pipe Nipple, 1/2" x 120mm Galvanized Steel	1	AP120D2
6	Elbow 90° M x F 1/2" BSP Galvanized	3	A92D2
7	Union M x F 1/2" BSP Galvanized	1	A341D2
8	Plug Male 1/2" BSP Galvanized	1	A291D2
9	Nipple Male 3/4" BSP Galvanized	1	A280E2
10	Nipple Male 1/2" BSP Galvanized	2	A280D2
11	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
12	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
13	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
14	Reducing Tee Female 1/2" x 3/4" x 1/2" BSP Galvanized	1	A130RDED2
15	Elbow 45° F x F 2" BSP Galvanized	1	A120I2
16	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
17	Nipple M x F 1/2" x 3,56mm Orifice x 45,5mm	1	700484
18	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	1	59304FO
19	Retarding Chamber RC-1	1	522111002
20	Alarm Valve Model AV-1-300 4"/114,3mm G x G	1	522031923
21	Check Valve, Swing Type, 1/2"	1	460491004D
22	Elbow WES 3mm x M5	1	406012
23	Strainer 1/2" Bronze	1	523531006
24	Self-Closing Drain Valve 1/2" Brass	1	2162156
25	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
26	Water Pressure Gauge 300 psi / 21 bar	2	025500013
27	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

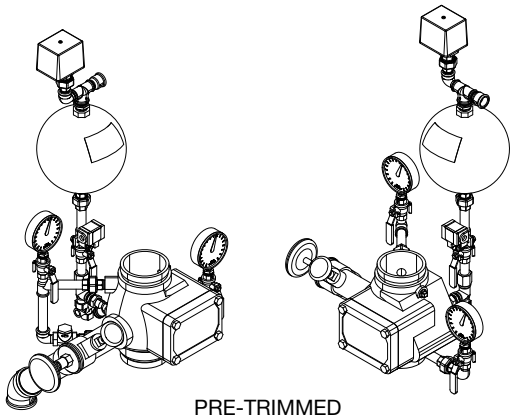

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


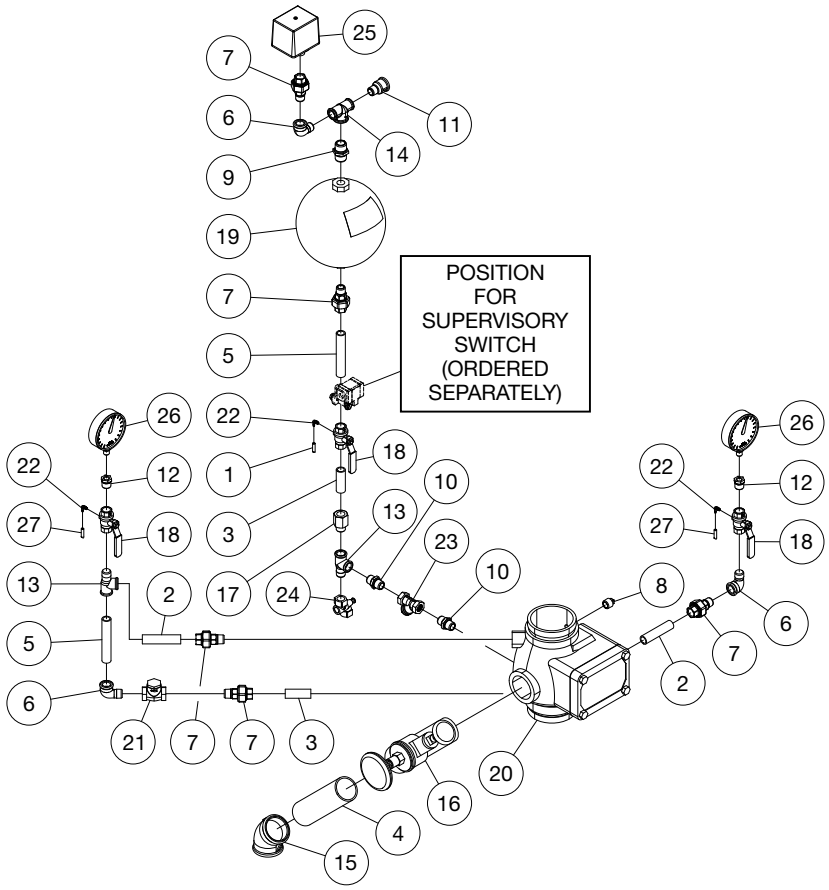


FIGURE 7B
DN100 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 90mm Galvanized Steel	2	AP90D2
2	Pipe Nipple, 1/2" x 60mm Galvanized Steel	2	AP60D2
3	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
4	Pipe Nipple, 1/2" x 120mm Galvanized Steel	2	AP120D2
5	Elbow 90° M x F 1/2" BSP Galvanized.	3	A92D2
6	Union M x F 1/2" BSP Galvanized	3	A341D2
7	Plug Male 1/2" BSP Galvanized	1	A291D2
8	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
9	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
10	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
11	Tee M x F 1/2" BSP Galvanized	1	A133D2
12	Elbow 45° F x F 2" BSP Galvanized.	1	A120I2
13	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
14	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
15	Alarm Valve Model AV-1-300 6"/168,3mm G x G.	1	522031925
16	Check Valve, Swing Type, 1/2".	1	460491004D
17	Elbow WES 3mm x M5.	2	406012
18	Self-Closing Drain Valve 1/2" Brass	1	2162156
19	Ball Valve, DN15 - 1/2" BSP Full Bore	1	1610000210
20	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
21	Water Pressure Gauge 300 psi / 21 bar	2	025500013
22	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

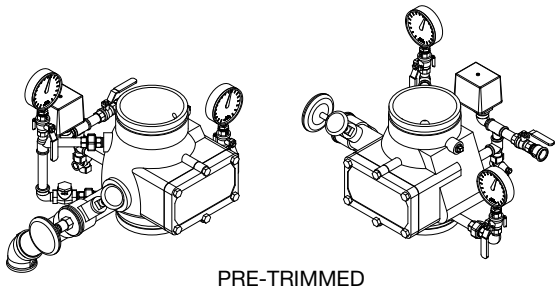

PRE-TRIMMED
VALVE ASSEMBLY


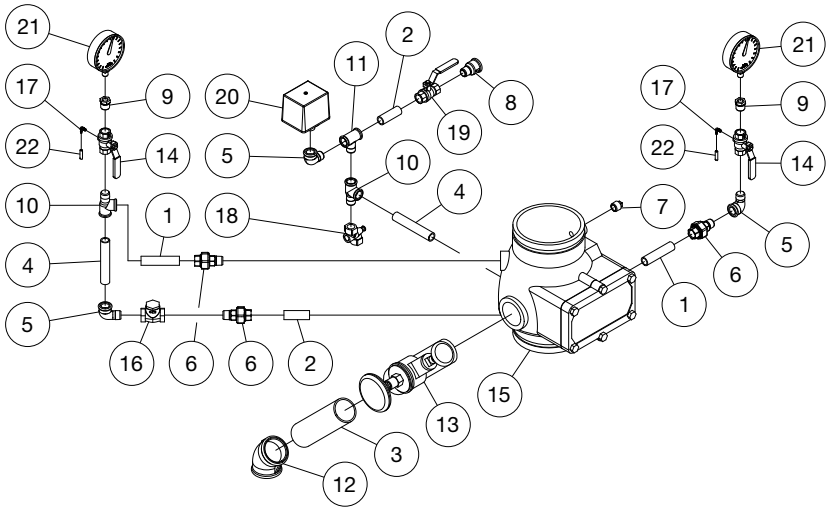


FIGURE 8A
DN150 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2” x 90mm Galvanized Steel	1	AP90D2
2	Pipe Nipple, 1/2” x 80mm Galvanized Steel	1	AP80D2
3	Pipe Nipple, 1/2” x 60mm Galvanized Steel	1	AP60D2
4	Pipe Nipple, 2” x 200mm Galvanized Steel	1	AP200I2
5	Pipe Nipple, 1/2” x 120mm Galvanized Steel	1	AP120D2
6	Elbow 90° M x F 1/2” BSP Galvanized.	3	A92D2
7	Union M x F 1/2” BSP Galvanized	1	A341D2
8	Plug Male 1/2” BSP Galvanized.	1	A291D2
9	Nipple Male 1/2” BSP Galvanized	1	A280D2
10	Coupling Female 1/2” BSP Galvanized	1	A270D2
11	Nipple F x M 3/4” x 1/2” BSP Galvanized	1	A246ED2
12	Nipple M x F 1/2” x 1/4” BSP Galvanized	2	A241DB2
13	Tee M x F x F 1/2” BSP Galvanized	2	A134D2
14	Tee M x F 1/2” BSP Galvanized	1	A133D2
15	Elbow 45° F x F 2” BSP Galvanized.	1	A120I2
16	Test and Drain Valve 2” NPT Inlet x 2” BSP Outlet x 1/2” Test Facility	1	700487
17	Ball Valve DN15-1/2” ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
18	Alarm Valve Model AV-1-300 6”/168,3mm G x G.	1	522031925
19	Check Valve, Swing Type, 1/2”.	1	460491004D
20	Elbow WES 3mm x M5.	2	406012
21	Self-Closing Drain Valve 1/2” Brass	1	2162156
22	Ball Valve, DN15 - 1/2” BSP Full Bore	1	1610000210
23	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
24	Water Pressure Gauge 300 psi / 21 bar	2	025500013
25	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

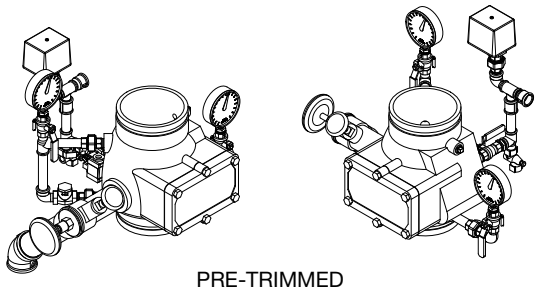

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


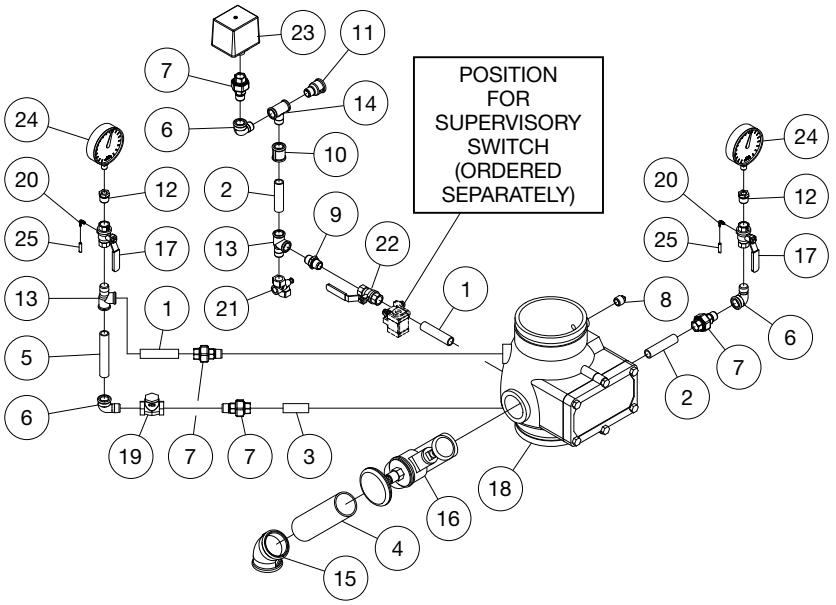


FIGURE 8B
DN150 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2” x 90mm Galvanized Steel	2	AP90D2
2	Pipe Nipple, 1/2” x 60mm Galvanized Steel	2	AP60D2
3	Pipe Nipple, 2” x 200mm Galvanized Steel	1	AP200I2
4	Pipe Nipple, 1/2” x 200mm Galvanized Steel	1	AP200D2
5	Pipe Nipple, 1/2” x 120mm Galvanized Steel	1	AP120D2
6	Elbow 90° M x F 1/2” BSP Galvanized	3	A92D2
7	Union M x F 1/2” BSP Galvanized	4	A341D2
8	Plug Male 1/2” BSP Galvanized	1	A291D2
9	Nipple Male 3/4” BSP Galvanized	1	A280E2
10	Nipple Male 1/2” BSP Galvanized	2	A280D2
11	Nipple F x M 3/4” x 1/2” BSP Galvanized	1	A246ED2
12	Nipple M x F 1/2” x 1/4” BSP Galvanized	2	A241DB2
13	Tee M x F x F 1/2” BSP Galvanized	2	A134D2
14	Reducing Tee Female 1/2” x 3/4” x 1/2” BSP Galvanized	1	A130RDED2
15	Elbow 45° F x F 2” BSP Galvanized	1	A120I2
16	Test and Drain Valve 2” NPT Inlet x 2” BSP Outlet x 1/2” Test Facility	1	700487
17	Nipple M x F 1/2” x 3,56mm Orifice x 45,5mm	1	700484
18	Ball Valve DN15-1/2” ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
19	Retarding Chamber RC-1	1	522111002
20	Alarm Valve Model AV-1-300 6”/168,3mm G x G	1	522031925
21	Check Valve, Swing Type, 1/2”	1	460491004D
22	Elbow WES 3mm x M5	2	406012
23	Strainer 1/2” Bronze	1	523531006
24	Self-Closing Drain Valve 1/2” Brass	1	2162156
25	Ball Valve DN15-1/2” BSP Full Bore	1	1610000210
26	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
27	Water Pressure Gauge 300 psi / 21 bar	2	025500013
28	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

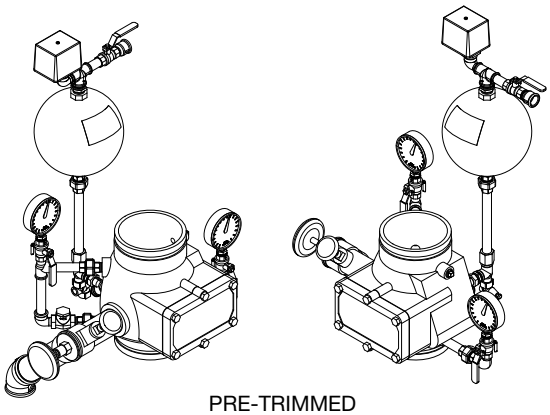

PRE-TRIMMED
VALVE ASSEMBLY


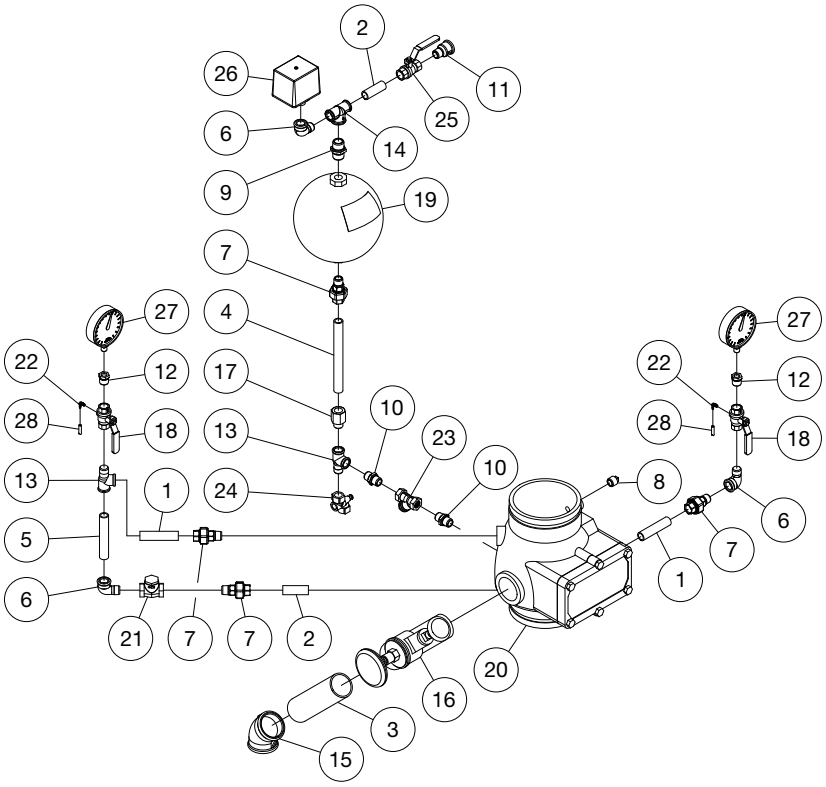


FIGURE 9A
DN150 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pressure Relief Hose 3 x 6 x 1,2m Transparent	1	WS00000004
2	Pipe Nipple, 1/2" x 90mm Galvanized Steel	2	AP90D2
3	Pipe Nipple, 1/2" x 60mm Galvanized Steel	1	AP60D2
4	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
5	Pipe Nipple, 1/2" x 120mm Galvanized Steel	1	AP120D2
6	Elbow 90° M x F 1/2" BSP Galvanized.	3	A92D2
7	Union M x F 1/2" BSP Galvanized	1	A341D2
8	Plug Male 1/2" BSP Galvanized	1	A291D2
9	Nipple Male 3/4" BSP Galvanized	1	A280E2
10	Nipple Male 1/2" BSP Galvanized	2	A280D2
11	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
12	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
13	Tee M x F x F 1/2" BSP Galvanized	2	A134D2
14	Reducing Tee Female 1/2" x 3/4" x 1/2" BSP Galvanized	1	A130RDED2
15	Elbow 45° F x F 2" BSP Galvanized.	1	A120I2
16	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
17	Nipple M x F 1/2" x 3,56mm Orifice x 45,5mm	1	700484
18	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	1	59304FO
19	Retarding Chamber RC-1	1	522111002
20	Alarm Valve Model AV-1-300 6"/168,3mm G x G.	1	522031925
21	Check Valve, Swing Type, 1/2".	1	460491004D
22	Elbow WES 3mm x M5.	1	406012
23	Strainer 1/2" Bronze	1	523531006
24	Self-Closing Drain Valve 1/2" Brass	1	2162156
25	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
26	Water Pressure Gauge 300 psi / 21 bar	2	025500013
27	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

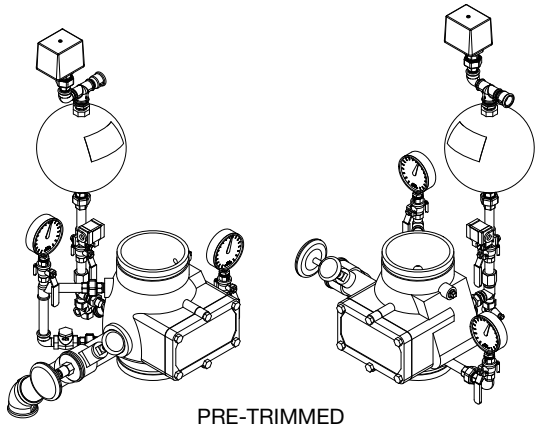

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


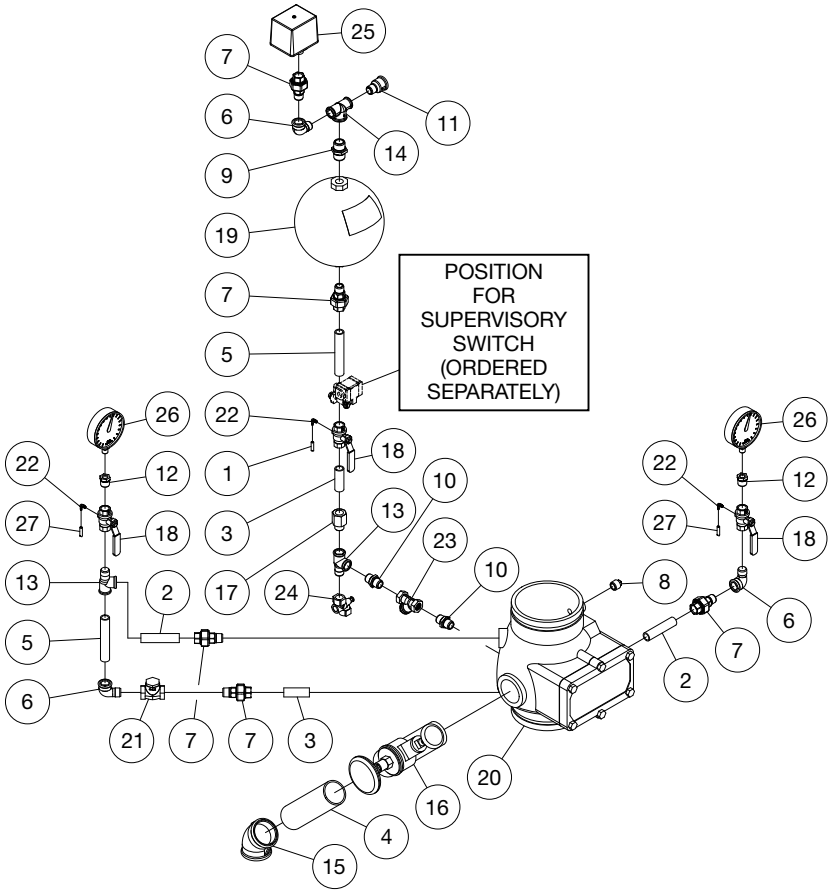


FIGURE 9B
DN150 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 60mm Galvanized Steel	1	AP60D2
2	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
3	Pipe Nipple, 3/4" x 160mm Galvanized Steel	1	AP160E2
4	Pipe Nipple, 3/4" x 120mm Galvanized Steel	1	AP120E2
5	Pipe Nipple, 1/2" x 120mm Galvanized Steel	1	AP120D2
6	Pipe Nipple, 3/4" x 110mm Galvanized Steel	1	AP110E2
7	Elbow 90° M x F 3/4" BSP Galvanized.	1	A92E2
8	Elbow 90° M x F 1/2" BSP Galvanized.	2	A92D2
9	Plug Male 3/4" BSP Galvanized.	2	A596E2
10	Union M x F 3/4" BSP Galvanized	2	A341E2
11	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
12	Nipple M x F 3/4" x 1/2" BSP Galvanized	2	A245ED2
13	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
14	Tee M x F x F 3/4" BSP Galvanized	1	A134E2
15	Tee M x F x F 1/2" BSP Galvanized	1	A134D2
16	Tee M x F 1/2" BSP Galvanized	1	A133D2
17	Tee Female 3/4" BSP Galvanized.	1	A130E2
18	Elbow 45° F x F 2" BSP Galvanized.	1	A120I2
19	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
20	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
21	Alarm Valve Model AV-1-300 8" G x G.	1	522031926
22	Check Valve, Swing Type, 3/4".	1	460491005
23	Elbow WES 3mm x M5.	2	406012
24	Self-Closing Drain Valve 1/2" Brass	1	2162156
25	Ball Valve, DN15 - 1/2" BSP Full Bore	1	1610000210
26	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
27	Water Pressure Gauge 300 psi / 21 bar	2	025500013
28	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

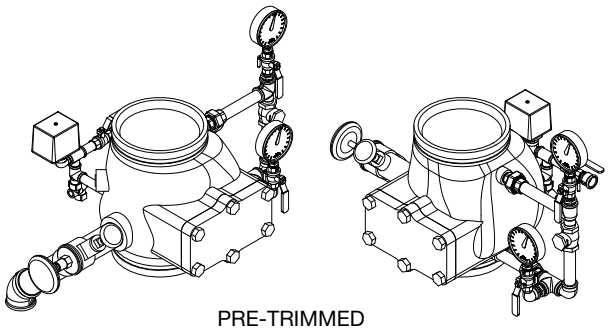

PRE-TRIMMED
VALVE ASSEMBLY


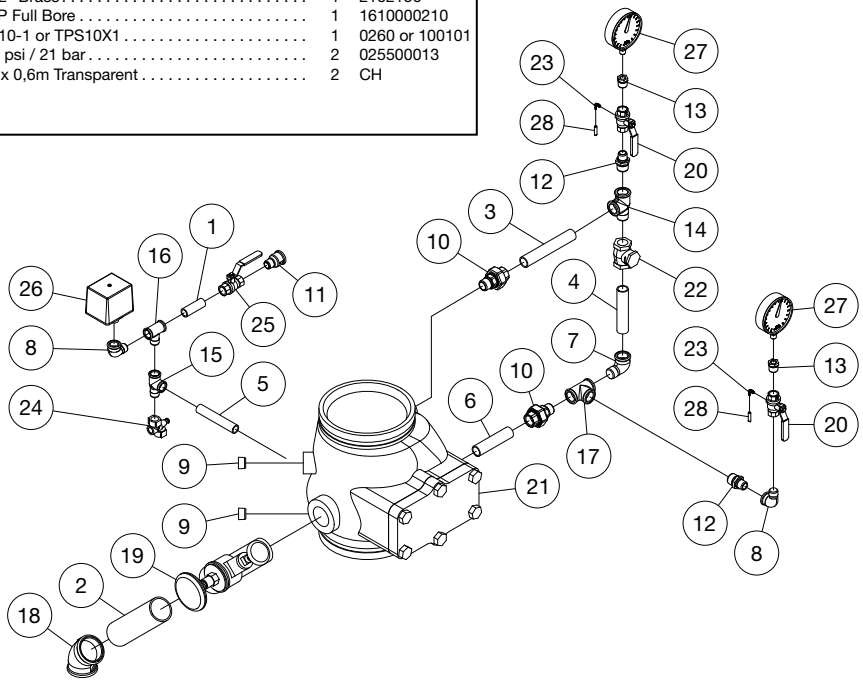


FIGURE 10A
DN200 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2” x 90mm Galvanized Steel	1	AP90D2
2	Pipe Nipple, 1/2” x 80mm Galvanized Steel	1	AP80D2
3	Pipe Nipple, 2” x 200mm Galvanized Steel	1	AP200I2
4	Pipe Nipple, 3/4” x 160mm Galvanized Steel	1	AP160E2
5	Pipe Nipple, 3/4” x 120mm Galvanized Steel	1	AP120E2
6	Pipe Nipple, 3/4” x 110mm Galvanized Steel	1	AP110E2
7	Elbow 90° M x F 3/4” BSP Galvanized	1	A92E2
8	Elbow 90° M x F 1/2” BSP Galvanized	2	A92D2
9	Plug Male 3/4” BSP Galvanized	2	A596E2
10	Union M x F 3/4” BSP Galvanized	2	A341E2
11	Union M x F 1/2” BSP Galvanized	1	A341D2
12	Nipple Male 1/2” BSP Galvanized	1	A280D2
13	Coupling Female 1/2” BSP Galvanized	1	A270D2
14	Nipple F x M 3/4” x 1/2” BSP Galvanized	1	A246ED2
15	Nipple M x F 3/4” x 1/2” BSP Galvanized	2	A245ED2
16	Nipple M x F 1/2” x 1/4” BSP Galvanized	2	A241DB2
17	Tee M x F x F 3/4” BSP Galvanized	1	A134E2
18	Tee M x F x F 1/2” BSP Galvanized	1	A134D2
19	Tee M x F 1/2” BSP Galvanized	1	A133D2
20	Tee Female 3/4” BSP Galvanized	1	A130E2
21	Elbow 45° F x F 2” BSP Galvanized	1	A120I2
22	Test and Drain Valve 2” NPT Inlet x 2” BSP Outlet x 1/2” Test Facility	1	700487
23	Ball Valve DN15-1/2” ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
24	Alarm Valve Model AV-1-300 8” G x G	1	522031926
25	Check Valve, Swing Type, 3/4”	1	460491005
26	Elbow WES 3mm x M5	2	406012
27	Self-Closing Drain Valve 1/2” Brass	1	2162156
28	Ball Valve, DN15 - 1/2” BSP Full Bore	1	1610000210
29	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
30	Water Pressure Gauge 300 psi / 21 bar	2	025500013
31	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

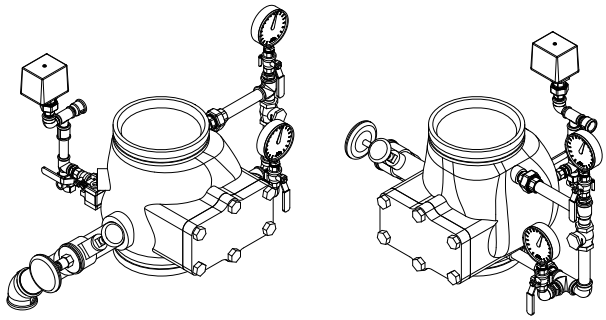

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


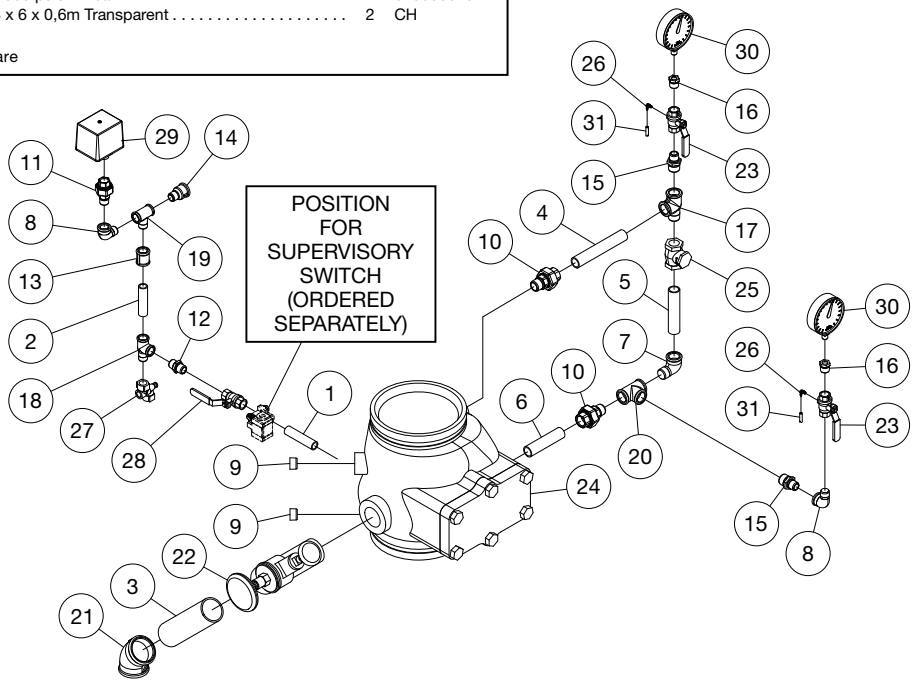


FIGURE 10B
DN200 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITHOUT MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	Pipe Nipple, 1/2" x 60mm Galvanized Steel	2	AP60D2
2	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
3	Pipe Nipple, 1/2" x 200mm Galvanized Steel	1	AP200D2
4	Pipe Nipple, 3/4" x 160mm Galvanized Steel	1	AP160E2
5	Pipe Nipple, 3/4" x 120mm Galvanized Steel	1	AP120E2
6	Pipe Nipple, 3/4" x 110mm Galvanized Steel	1	AP110E2
7	Elbow 90° M x F 3/4" BSP Galvanized	1	A92E2
8	Elbow 90° M x F 1/2" BSP Galvanized	2	A92D2
9	Plug Male 3/4" BSP Galvanized	2	A596E2
10	Union M x F 3/4" BSP Galvanized	2	A341E2
11	Union M x F 1/2" BSP Galvanized	1	A341D2
12	Nipple Male 3/4" BSP Galvanized	1	A280E2
13	Nipple Male 1/2" BSP Galvanized	1	A280D2
14	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
15	Nipple M x F 3/4" x 1/2" BSP Galvanized	2	A245ED2
16	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
17	Tee M x F x F 3/4" BSP Galvanized	1	A134E2
18	Tee M x F x F 1/2" BSP Galvanized	1	A134D2
19	Reducing Tee Female 1/2" x 3/4" x 1/2" BSP Galvanized	1	A130RDED2
20	Tee Female 3/4" BSP Galvanized	1	A130E2
21	Elbow 45° F x F 2" BSP Galvanized	1	A120I2
22	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
23	Nipple M x F 1/2" x 3,56mm Orifice x 45,5mm	1	700484
24	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	2	59304FO
25	Retarding Chamber RC-1	1	522111002
26	Alarm Valve Model AV-1-300 8" G x G	1	522031926
27	Check Valve, Swing Type, 3/4"	1	460491005
28	Elbow WES 3mm x M5	2	406012
29	Strainer 1/2" Bronze	1	523531006
30	Self-Closing Drain Valve 1/2" Brass	1	2162156
31	Ball Valve DN15-1/2" BSP Full Bore	1	1610000210
32	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
33	Water Pressure Gauge 300 psi / 21 bar	2	025500013
34	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

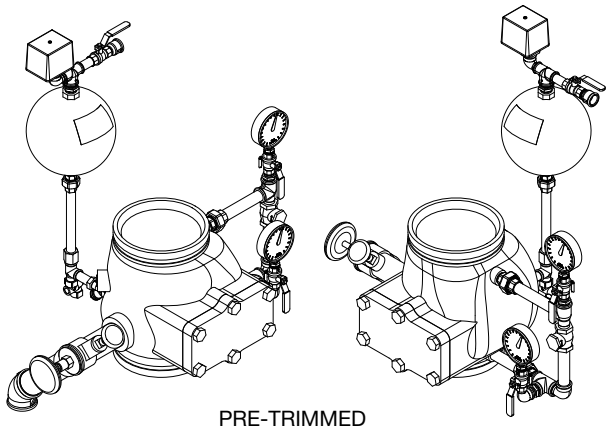

PRE-TRIMMED
VALVE ASSEMBLY


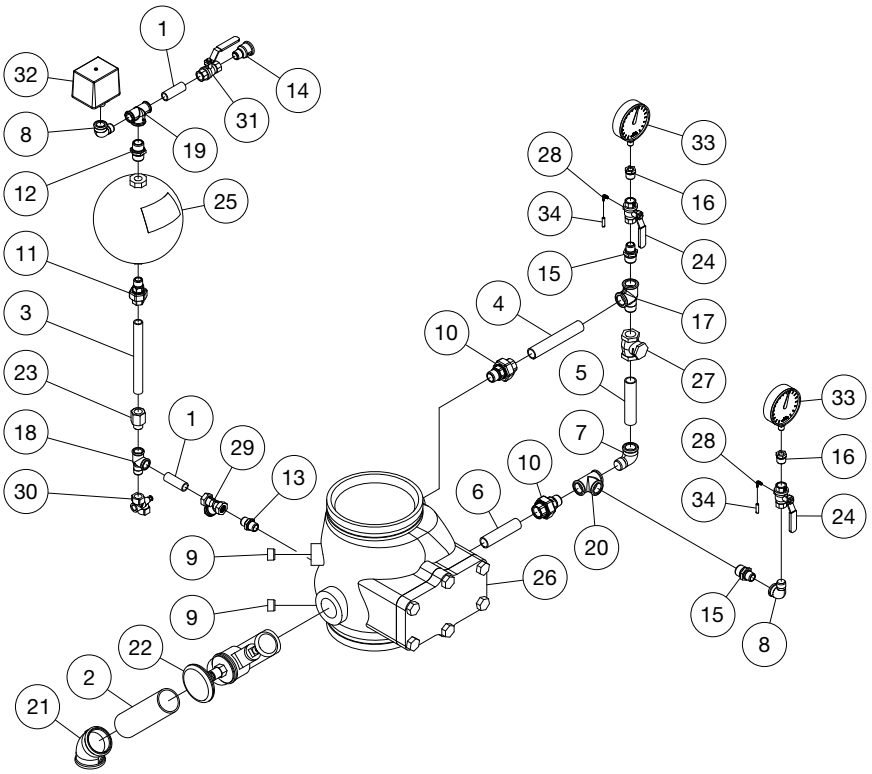


FIGURE 11A
DN200 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER

NO.	DESCRIPTION	QTY.	P/N
1	Pressure Relief Hose 3 x 6 x 1,2m Transparent	1	WS00000004
2	Pipe Nipple, 1/2" x 60mm Galvanized Steel	2	AP60D2
3	Pipe Nipple, 2" x 200mm Galvanized Steel	1	AP200I2
4	Pipe Nipple, 3/4" x 160mm Galvanized Steel	1	AP160E2
5	Pipe Nipple, 3/4" x 120mm Galvanized Steel	1	AP120E2
6	Pipe Nipple, 1/2" x 120mm Galvanized Steel	1	AP120D2
7	Pipe Nipple, 3/4" x 110mm Galvanized Steel	1	AP110E2
8	Elbow 90° M x F 3/4" BSP Galvanized	1	A92E2
9	Elbow 90° M x F 1/2" BSP Galvanized	2	A92D2
10	Plug Male 3/4" BSP Galvanized	2	A596E2
11	Union M x F 3/4" BSP Galvanized	2	A341E2
12	Union M x F 1/2" BSP Galvanized	1	A341D2
13	Nipple Male 3/4" BSP Galvanized	1	A280E2
14	Nipple Male 1/2" BSP Galvanized	1	A280D2
15	Nipple F x M 3/4" x 1/2" BSP Galvanized	1	A246ED2
16	Nipple M x F 3/4" x 1/2" BSP Galvanized	2	A245ED2
17	Nipple M x F 1/2" x 1/4" BSP Galvanized	2	A241DB2
18	Tee M x F x F 3/4" BSP Galvanized	1	A134E2
19	Tee M x F x F 1/2" BSP Galvanized	1	A134D2
20	Reducing Tee Female 1/2" x 3/4" x 1/2" BSP Galvanized	1	A130RDED2
21	Tee Female 3/4" BSP Galvanized	1	A130E2
22	Elbow 45° F x F 2" BSP Galvanized	1	A120I2
23	Test and Drain Valve 2" NPT Inlet x 2" BSP Outlet x 1/2" Test Facility	1	700487
24	Nipple M x F 1/2" x 3,56mm Orifice x 45,5mm	1	700484
25	Ball Valve DN15-1/2" ISO 7/1 Full Bore PN40 Venthole Threaded M5	1	59304FO
26	Retarding Chamber RC-1	1	522111002
27	Alarm Valve Model AV-1-300 8" G x G	1	522031926
28	Check Valve, Swing Type, 3/4"	1	460491005
29	Elbow WES 3mm x M5	1	406012
30	Strainer 1/2" Bronze	1	523531006
31	Self-Closing Drain Valve 1/2" Brass	1	2162156
32	Pressure Switch Model PS10-1 or TPS10X1	1	0260 or 100101
33	Water Pressure Gauge 300 psi / 21 bar	2	025500013
34	Pressure Relief Hose 3 x 6 x 0,6m Transparent	2	CH

Notes
a. CH: Common Hardware

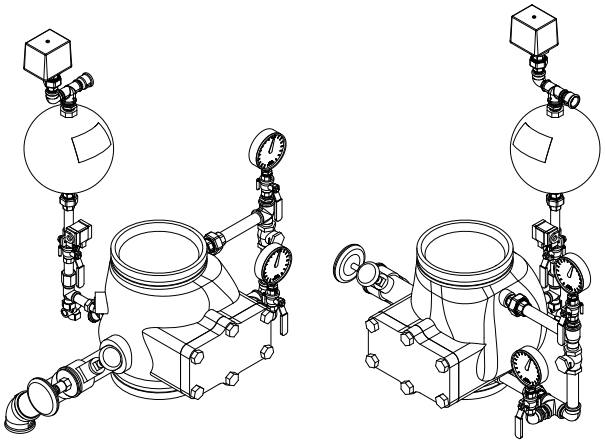

PRE-TRIMMED
VALVE ASSEMBLY
(SHOWN WITH
SEPARATELY ORDERED
SUPERVISORY SWITCH)


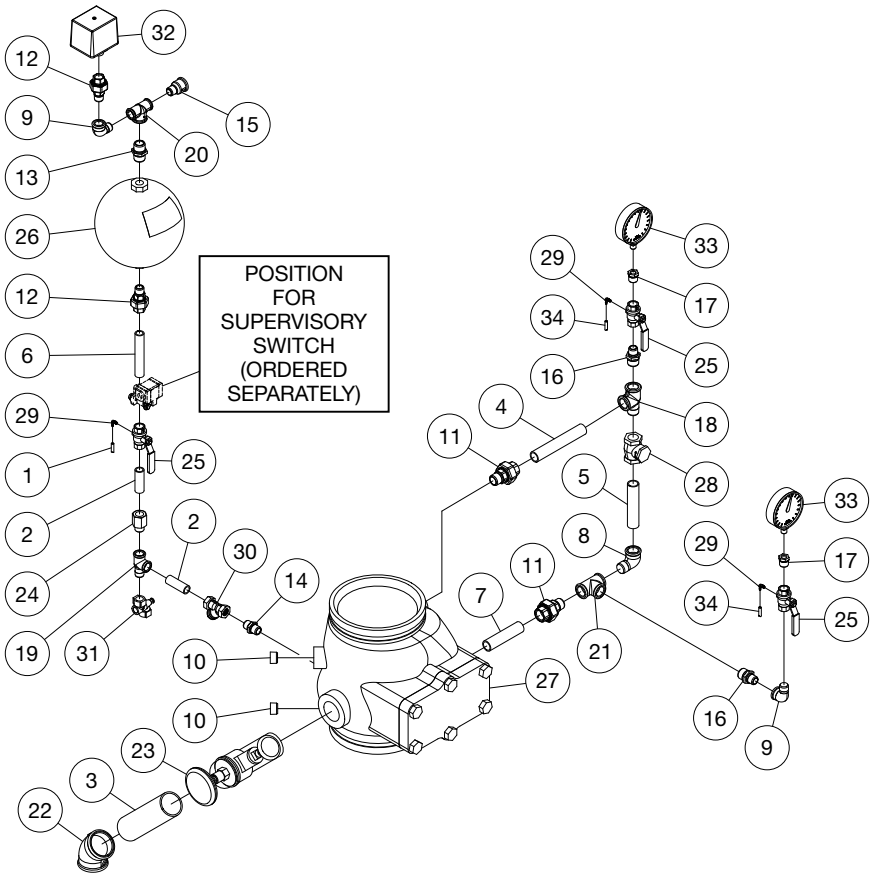


FIGURE 11B
DN200 MODEL AV-1-300 ALARM VALVE
TRIM ARRANGEMENT WITH MODEL RC-1 RETARD CHAMBER
(SUITABLE FOR SUPERVISORY)

NO.	DESCRIPTION	QTY.	P/N
1	3/4" x 1/4" Hex Bushing	1	CH
2	3/32" Vent Fitting	1	92-032-1-002
3	1/4" x 5'-0"Tubing	1	CH

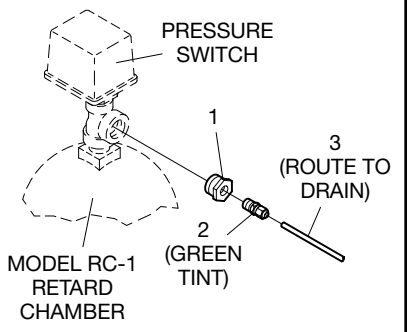

Notes
a. Trim kit is ordered separately when a Water Motor Alarm (P/N 52-201-2-012) is not installed.
b. CH: Common Hardware

FIGURE 12
ALARM VENT TRIM KIT

Valve Setting Procedure

NOTICE

After placing a fire protection system in service, notify the proper authorities and advise those responsible for monitoring proprietary and/or central station alarms.

Filling the system with water will result in operation of the associated alarms. Consequently, notify the owner and the fire department, central station, or other signal station to which the alarms are connected.

The following steps are to be performed when initially setting the TYCO Model AV-1-300 Alarm Check Valve or after system operation due to a fire.

Step 1. Close the Main Control Valve and open the Main Drain Valve, as well as any auxiliary drain valves.

Step 2. Clean the strainers in the alarm line and open the Water Motor Alarm Control Valve.

Step 3. Close the Main Drain Valve, as well as any auxiliary drain valves, and the Alarm Test Valve.

Step 4. Open the remote cross main or branch line vent connection. See Step 6 in the Installation section.

Step 5. Slowly open the main control valve until the sound of flowing water just begins, then open the valve one more turn.

Step 6. Close the remote branch line vent connection after the discharge of aerated water ceases and the outlet has flowed full for at least 15 seconds.

Step 7. Fully open the Main Control Valve.

Step 8. Open the end-of-line Inspector's Test Connection (or Alarm Test Valve, if acceptable to the authority having jurisdiction). Verify that the system alarms operate.

Step 9. Close the end-of-line Inspector's Test Connection (or Alarm Test Valve).

Step 10. Verify that water ceases to flow from the alarm line drain. If water continues to flow, follow the corrective procedure described in the Care and Maintenance section.

Allow sufficient time for drainage of the Retard Chamber and the piping to the water motor alarm. If needed, the plunger on the Automatic Drain Valve can be pressed to accelerate draining of the Retard Chamber.

Step 11. Once it has been verified that the flow of water out of the alarm line drain has stopped, the alarm valve is set and is ready for service.

Care and Maintenance

The following procedures and inspections should be performed as indicated, in addition to any specific requirements of the authority having jurisdiction. Any impairment must be immediately corrected.

Performing the care and maintenance procedures will result in operation of the associated alarms. Consequently, notification must first be given to the owner and fire department, central station, or other signal station to which the alarms are connected.

Before closing a fire protection system main control valve for maintenance work on the fire protection systems that it controls, obtain permission to shut down the affected fire protection systems must first be obtained from the proper authorities, and notify all personnel who may be affected by this action.

The owner is responsible for the inspection, testing, and maintenance of their fire protection system and devices in compliance with this document, as well as in addition to the standards of any authority having jurisdiction. The installing contractor or product manufacturer should be contacted relative to any questions.

Automatic sprinkler systems are recommended to be inspected, tested, and maintained by a qualified Inspection Service.

The Model AV-1-300 Alarm Valves do not require any regularly scheduled maintenance. It is recommended, however, that proper operation of the alarms be periodically verified in accordance with a procedure that is acceptable to the authority having jurisdiction. Any impairment must be immediately corrected.

Periodic Waterflow Alarm Test Procedure

Testing of the system waterflow alarms should be performed periodically based on the requirements of the authority having jurisdiction.

Step 1. Notify the proper authorities and all personnel who may be affected that an alarm test is to be performed.

Step 2. Open the Alarm Test Valve (or end-of-line Inspector's Test Connection, if acceptable to the authority having jurisdiction) and verify that the system alarms operate in accordance with the requirements of the authority having jurisdiction. Verify that the water motor alarm and/or the pressure alarm switch properly actuate and within the elapsed time required by the authority having jurisdiction.

Step 3. Verify that water is draining from the Automatic Drain Valve.

Step 4. Close the Alarm Test Valve (or end-of-line Inspector's Test Connection).

Step 5. Verify that water ceases to flow from the Automatic Drain Valve after allowing sufficient time for the Retard Chamber and alarm line to the water motor alarm, as applicable, to drain.

If desired, the plunger on the Automatic Drain Valve can be pressed to accelerate draining of the Retard Chamber.

Step 6. Clean the Strainer located at the connection to the Retard Chamber, as applicable. Be sure to replace the strainer basket and tighten the cap securely.

NOTICE

Cleaning of the Strainer after each operation of the alarms is especially important in the case of water supplies (such as lakes and rivers) having a large quantity of suspended matter. A clogged alarm line can prevent operation of the alarms.

Step 7. Notify all authorities responsible for monitoring the installation that the fire protection system has been returned to service.

Sprinkler System Drain-Down
Draining the sprinkler system must be done in accordance with the following procedure:

Step 1. Close the main control valve, if this has not already been done.

Step 2. Open the remote cross main or branch line vent connection (See Step 6 in the Installation section).

Step 3. Open the Main Drain Valve. Check first to see that the drainage water discharge will not cause damage or result in dangerous conditions.

Step 4. Wait until the Supply Pressure Gauge reads zero pressure and the sound of draining water has stopped before performing any maintenance work on the fire protection system.

Leakage from
Automatic Drain Valve
Follow the steps indicated below until water ceases to flow from the alarm line drain. After each step check if leakage has stopped.

Step 1. Open the Main Drain Valve. Let the water flow for about 5 seconds and then close the Main Drain Valve. This should flush any loose debris that may have become trapped between the Clapper Facing and the Seat Ring or in the seating area of the Drain Valve.

Step 2. Repeat Step 1 if the rate of continued flow out of the drain was noticeably reduced.

Step 3. If leakage from the Automatic Drain Valve does not stop, drain the system in accordance with the prescribed procedure. After the system has been drained, remove the Hand-Hole Cover.

While holding the Spring down by the coils, remove the Hinge Pin. Remove the Spring and Clapper Assembly).

Step 4. Using a light, check for and remove any debris that may have become lodged within the Seat Ring groove. Inspect the Seat Ring seat for any damage. If the Seat Ring has become dented across the seat then the Alarm Check Valve will have to be replaced. It is impractical to re-face a Seat Ring in the field.

Step 5. Check for and remove any debris that may have become lodged in the Clapper Facing. If a minor imperfection remains in the Clapper Facing, then turn it over after thoroughly cleaning both surfaces with a clean cloth. Replace the Clapper Facing if necessary. Be sure to securely re-tighten the retaining fastener for the Clapper Washer.

Step 6. Replace the Spring and Clapper Assembly as shown in Figure 1. While holding the coils of the Spring down, re-insert the Hinge Pin. Be sure that the Hinge Pin is pushed all the way to the rear of the valve.

Step 7. Install the Handhole Cover:

a. Align the Handhole Cover Gasket and Handhole Cover in proper orientation with the valve body as shown in Figure 1, and hold in place.

b. Apply LOCTITE No. 242 (or equivalent) to the Hex Bolt threads.

c. Insert the Hex Bolts through the Handhole Cover Gasket and Handhole Cover, and hand-tighten into the valve body.

d. Using a crossdraw sequence to assure uniformity, wrench-tighten the Hex Bolts to the appropriate torque values as shown in Table C.

e. Inspect to assure all the Hex Bolts are securely tightened

Step 8. Return the Alarm Valve to operation in accordance with the steps described in the Setting Procedure section.

Loss of Excess
System Pressure
In the case of a variable pressure system, the System Pressure Gauge should normally indicate a pressure greater than that shown by the Supply Pressure Gauge. Also, the value should be close to that of the peak supply pressure that has occurred after the system was placed in service.

NOTICE

Loss of excess system pressure will increase the likelihood of a false alarm in the case of a variable pressure system.

Follow the procedure indicated below to correct a loss of excess system pressure condition.

Step 1. Check for signs of continued leakage from the Automatic Drain Valve. If rust stains and/or water deposits indicate that continued leakage has been taking place, take corrective action according to the procedure described in the sub-section entitled “Leakage From Automatic Drain Valve”.

Step 2. If there are no signs of continued leakage from the Automatic Drain Valve, drain the system in accordance with the prescribed procedure and then clean or replace the Bypass Check Valve as required.

Nominal Valve Sizes in. (DN)	Handhole Cover Bolt Torque lb-ft (N·m)
2-1/2 (DN65)	20 (27)
4 (DN100)	25 (34)
6 (DN150)	25 (34)
8 (DN200)	50 (68)

TABLE C
HANDHOLE COVER BOLTS
RECOMMENDED TORQUE

After replacing the Bypass Check Valve as required, return the fire protection system to operation in accordance with the steps described in the Valve Setting Procedure section.

Step 3. If loss of excess system pressure continues, inspect the sprinkler system for leakage.

Excess Pressure Due To
Thermal Expansion
Wet pipe sprinkler systems subject to ambient temperatures in excess of 38°C can experience significant increases in system pressure due to the thermal expansion of the water. In particular, a gridded wet-pipe system with a relatively small air pocket and no relief valve can be subjected to an increase of more than 6,9 bar, due to an increase in ambient temperature of approximately 28°C.

As necessary, install a pressure relief valve, in accordance with the requirements of the authority having jurisdiction, to automatically relieve the excess pressure which could otherwise be created in wet-pipe systems that are exposed to significant increases in ambient temperature.

False Alarms
If repeated false alarms occur in a variable pressure system:

Step 1. Check for and correct the cause of continued leakage out the Automatic Drain Valve.

Step 2. Check for and clean a clogged Self Closing Drain Valve.

Step 3. Check for and correct the cause of a loss in excess system pressure.

Step 4. Drain the sprinkler system and re-fill it in accordance with the steps described in the Valve Setting Procedure section.

P/N XX — X — XX — XX — X — XX

END CONNECTION	
11	Groove x Groove
12	Flange x Groove ANSI
13	Flange x Flange ANSI
14	Flange x Flange PN10/16
15	Flange x Flange PN16 (8″)
16	Flange x Groove PN16 (8″)

SIZE	
0	DN65 76,1 mm[1]
4	DN100 114,3 mm
6	DN150 168,3 mm
7	DN150 165,1 mm
8	DN200 219,1 mm

TRIM	
88	EUR Supervised
89	EUR

STOP VALVE	
00	To be ordered separately
21	Included[2]

SWITCH	
0	None
1	PS10-1 or TPS10X1

ACCESSORIES	
00	None
01	Model RC-1 Retard Chamber
03	None for Supervised Version (88)
05	Model RC-1 Retard Chamber for Supervised Version (88)

Notes:
1. Flange x Flange is not available for 76,1 mm
2. Applicable to VdS Approved 88 trim option only

TABLE D
MODEL AV-1-300 ALARM VALVE
WITH FULLY ASSEMBLED EUROPEAN CONFORMITY TRIM
PART NUMBER SELECTION

Intermittent Alarms
If the pressure alarm switch gives a steady signal, but the water motor generates an intermittent alarm, check for binding in the water motor alarm drive shaft.

If the water motor alarm and/or the pressure alarm switch provide an intermittent alarm, it is likely the consequence of an excessive amount of air being trapped within the sprinkler system. Drain down the sprinkler system and re-fill it in accordance with the steps described in the Valve Setting Procedure section.

A discontinuance of an alarm may also be caused by the Clapper closing due to a sudden drop in supply pressure or the shut-off of a pump in the supply line. These types of problems can only be corrected by maintaining a steady supply pressure.

Limited Warranty

For warranty terms and conditions, visit www.tyco-fire.com.

Ordering Procedure

Contact your local distributor for availability. When placing an order, indicate the full product name and Part Number (P/N).

Model AV-1-300 Alarm Valve with European Conformity Trim
Specify: AV-1-300 Alarm Valve with European Conformity Valve Trim, Fully Assembled, P/N (specify, see Table C)

Accessories
Specify: (description) for use with (specify size) Model AV-1-300 Alarm Valve, P/N (specify):

Alarm Vent Trim When Water Motor Alarm Not Installed* 522011012E

A through Z Labels for Attaching to Valve Components. WS00000033

Waterflow Pressure Alarm Switch PS10-1 or TPS10x1 . . . . . 0260 or 100101

Dual Contact Waterflow Pressure Alarm Switch PS10-2 or TPS10X2 . . . . . 0261 or 100102

Model WMA-1 Water Motor Alarm Red Finish Gong 526301021R

Supervisory Switch for Water Motor Alarm Control Valve . . . SUPSWITCHBI2DN15-1

* See Figure 12


1467 Elmwood Avenue, Cranston, RI 02910 | Telephone +1-401-781-8220

© 2025 Johnson Controls. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.

NATIONAL FIRE PROTECTION ASSOCIATION and NFPA are registered trademarks of National Fire Protection Association;
TEFLON is a trademark of The Chemours Company FC, LLC

Johnson Controls

Appendix A of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN65, Without Retarding Chamber

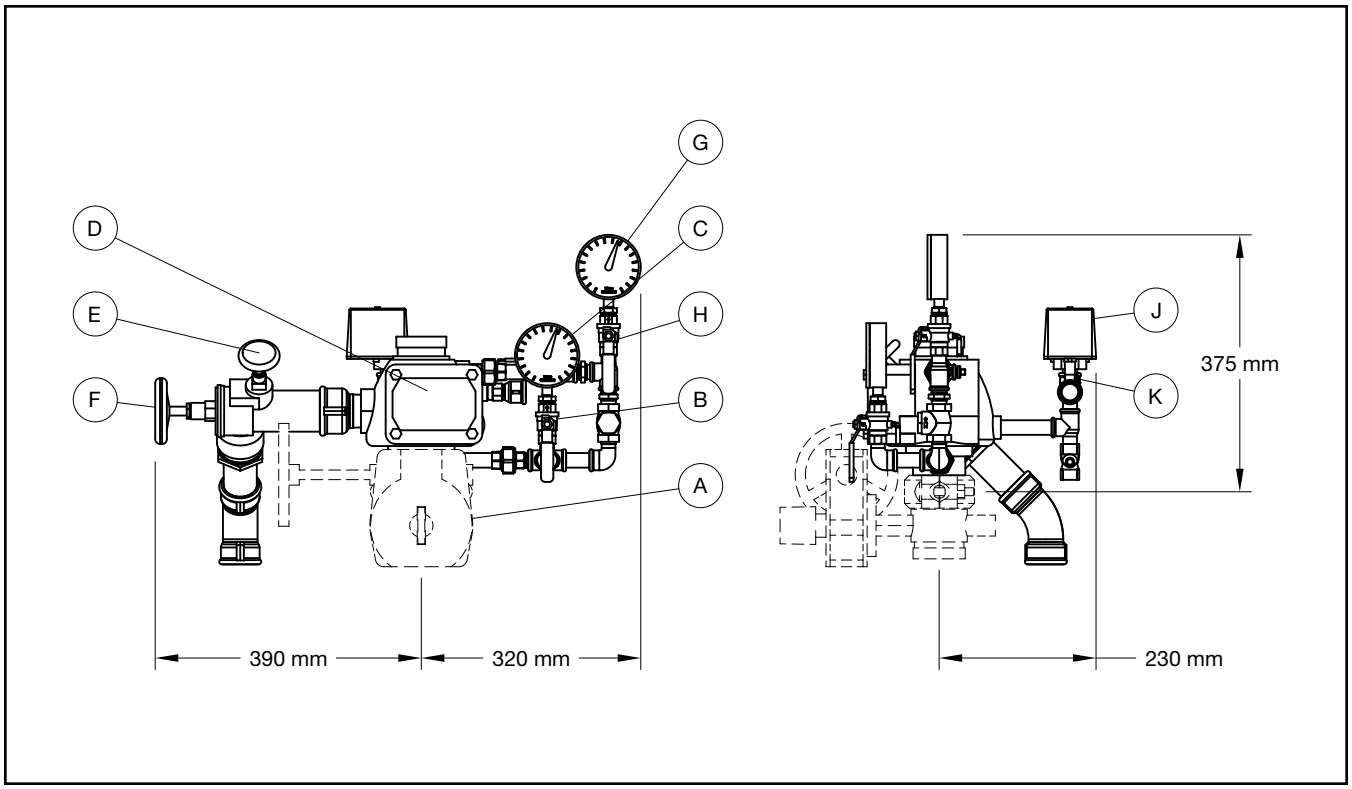

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix B of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN65, Without Retarding Chamber (Suitable for Supervisory)

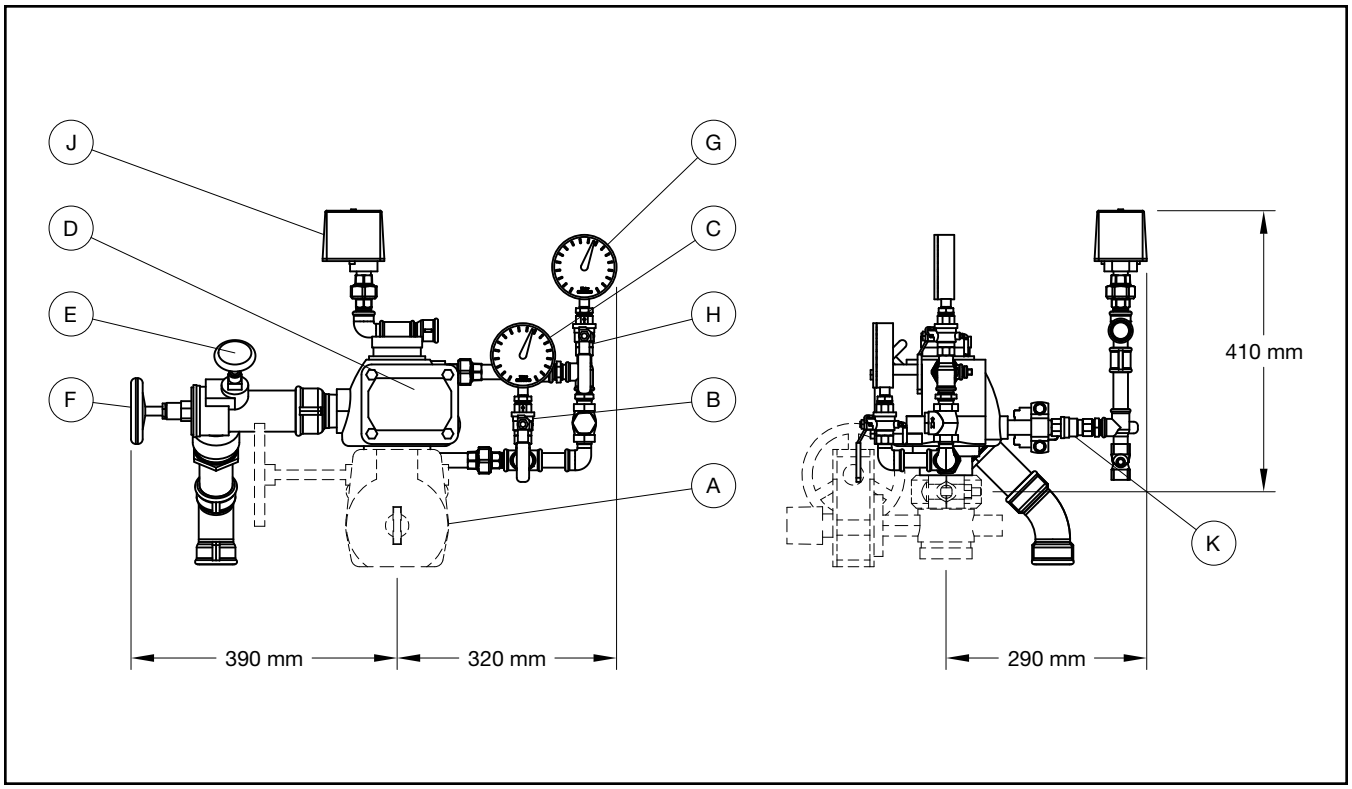

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix C of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN65, With Retarding Chamber

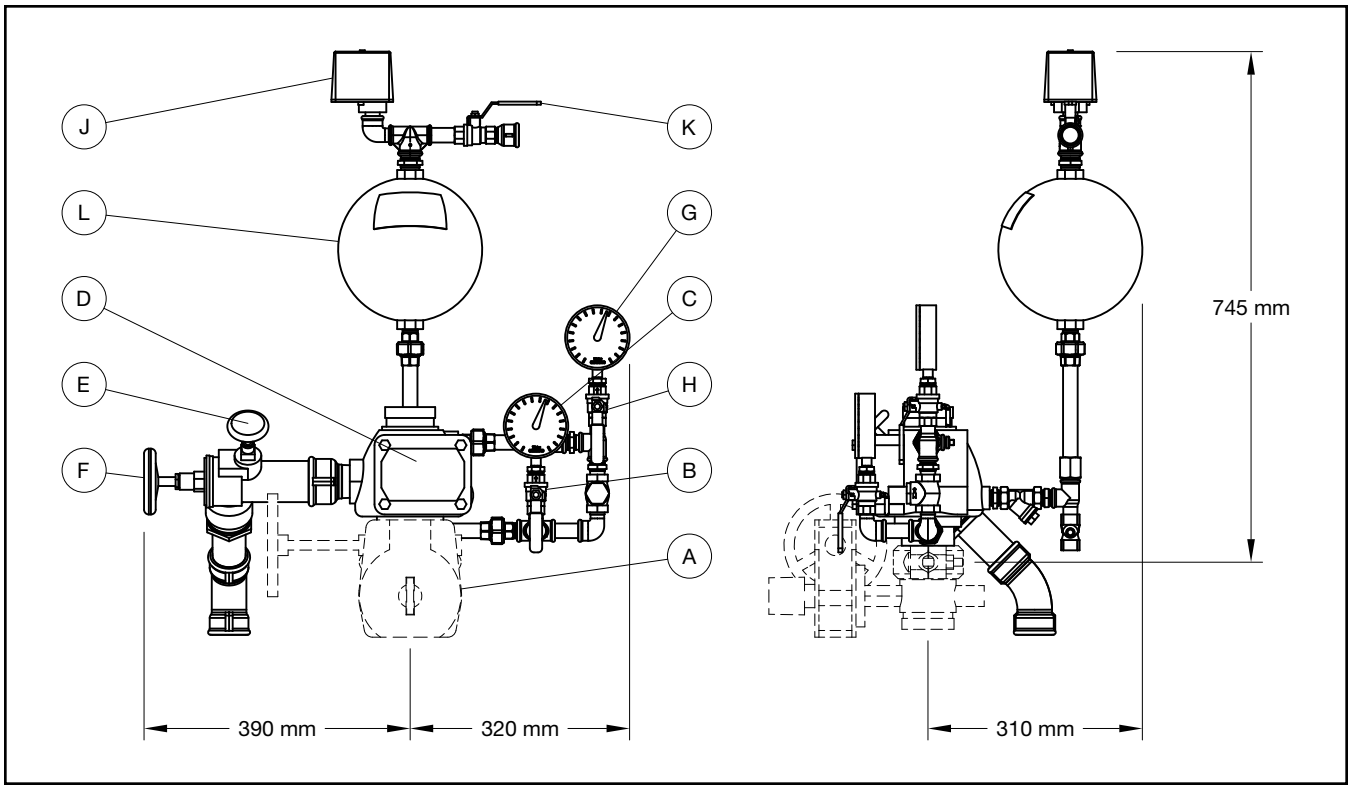

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix D of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN65, With Retarding Chamber (Suitable for Supervisory)

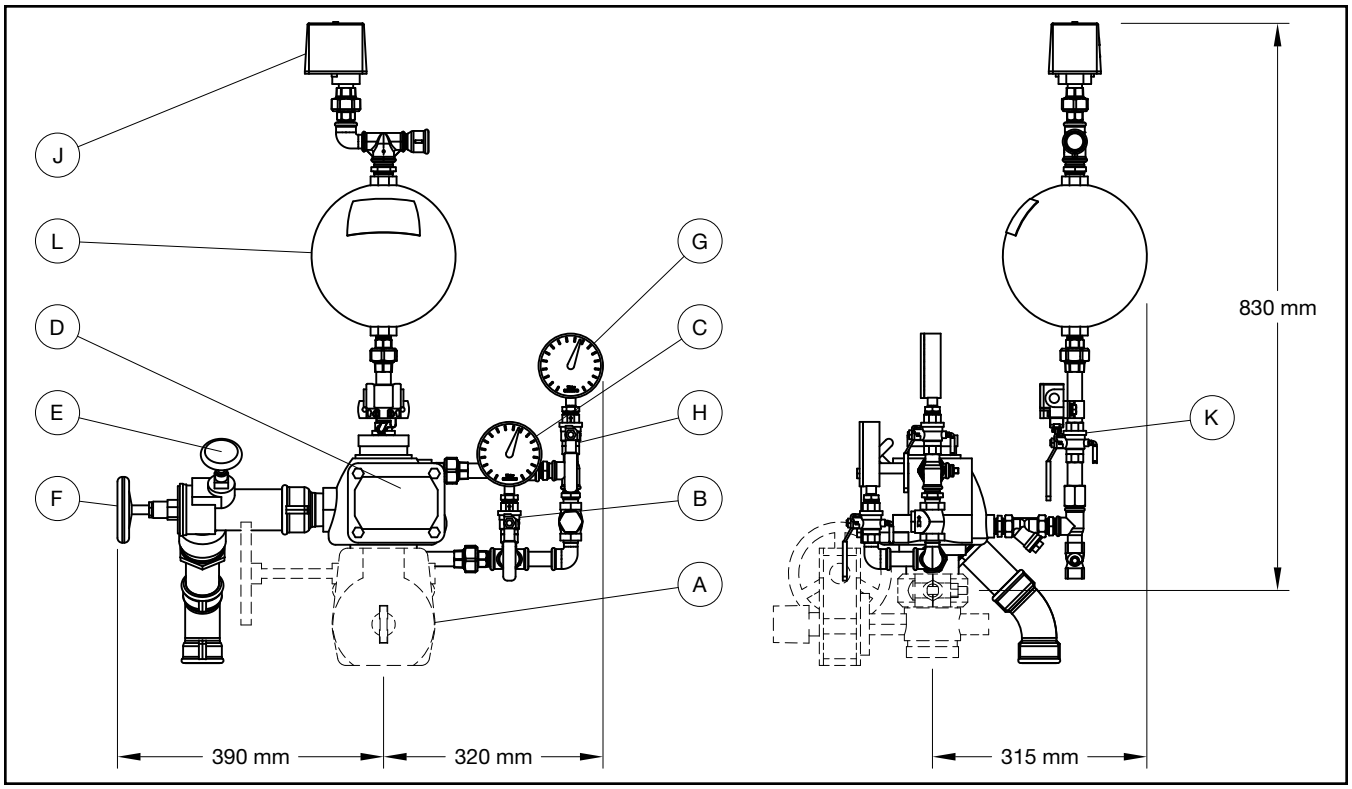

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix E of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN100, Without Retarding Chamber

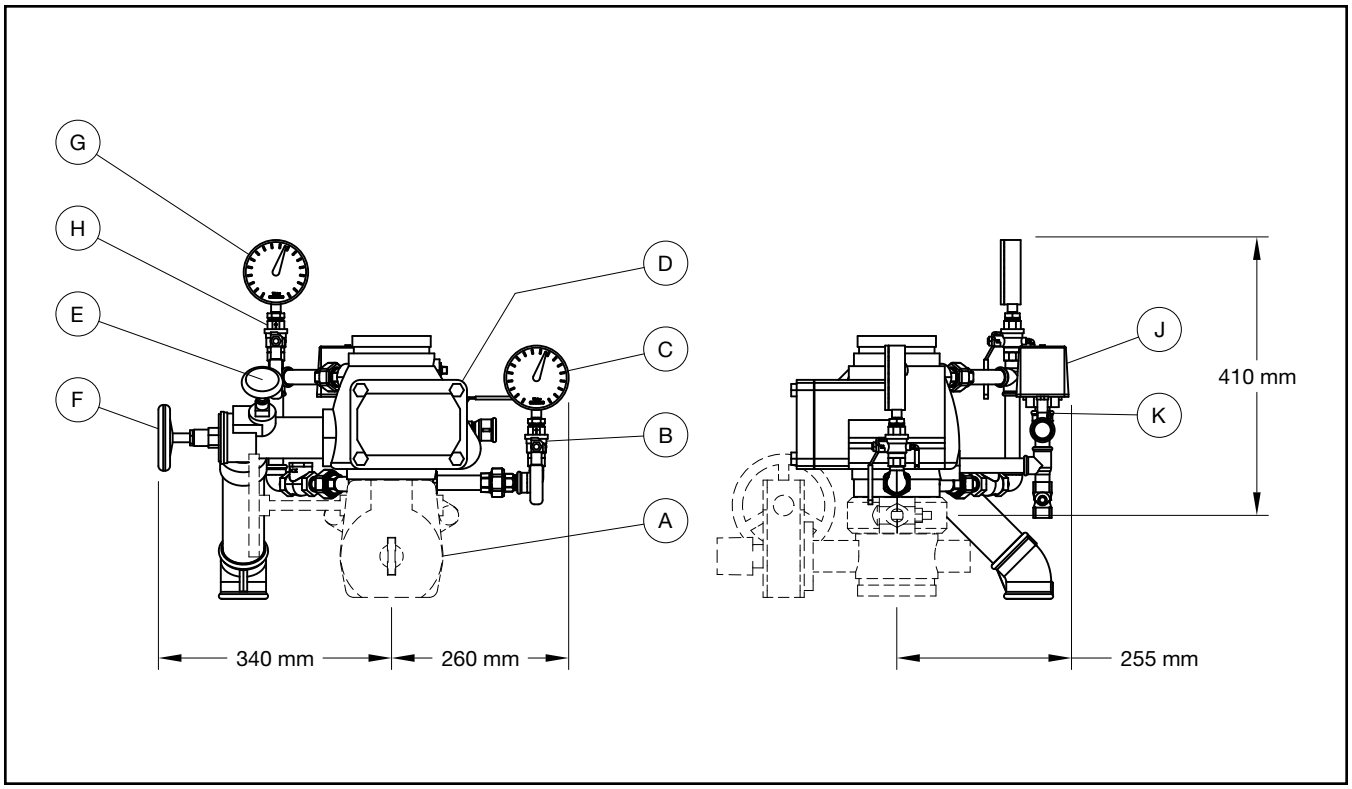

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix F of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN100, Without Retarding Chamber (Suitable for Supervisory)

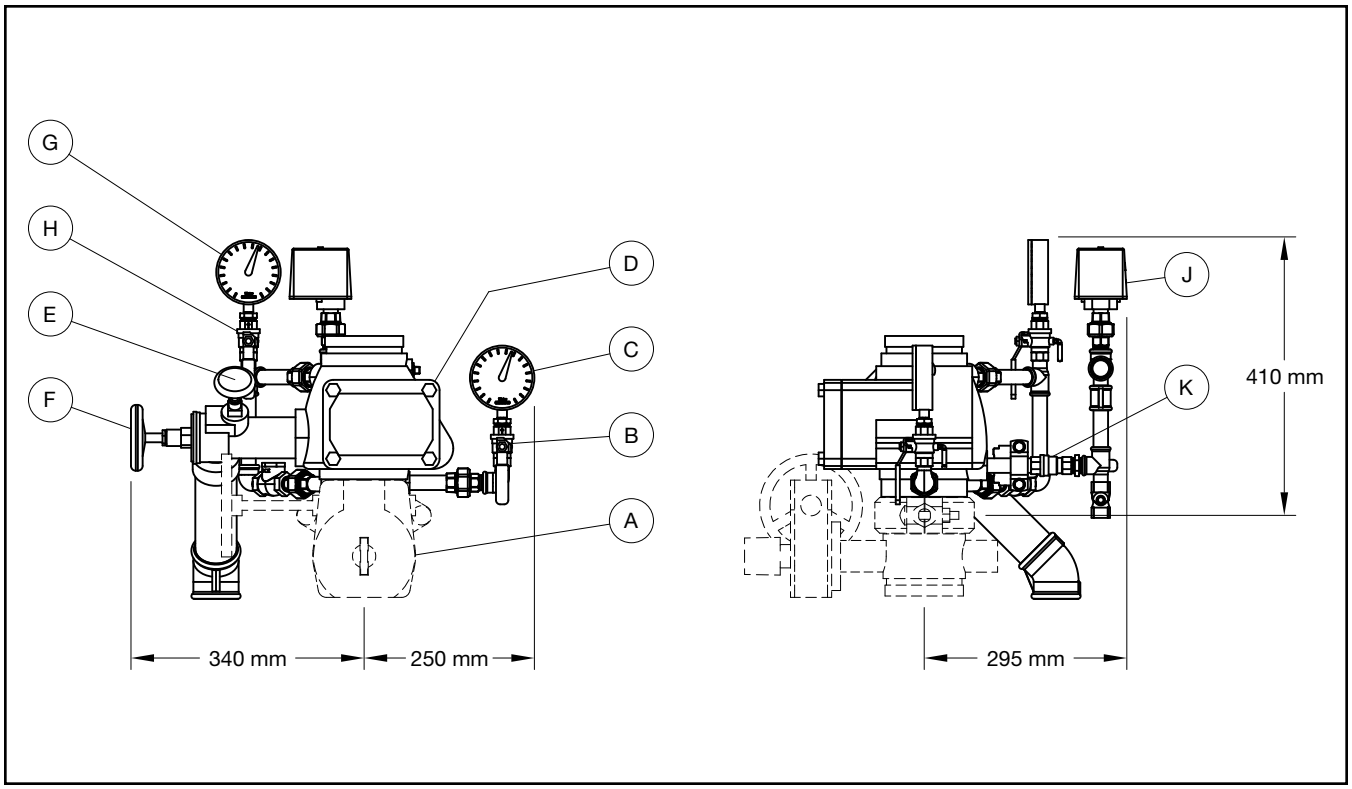

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix G of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN100, With Retarding Chamber

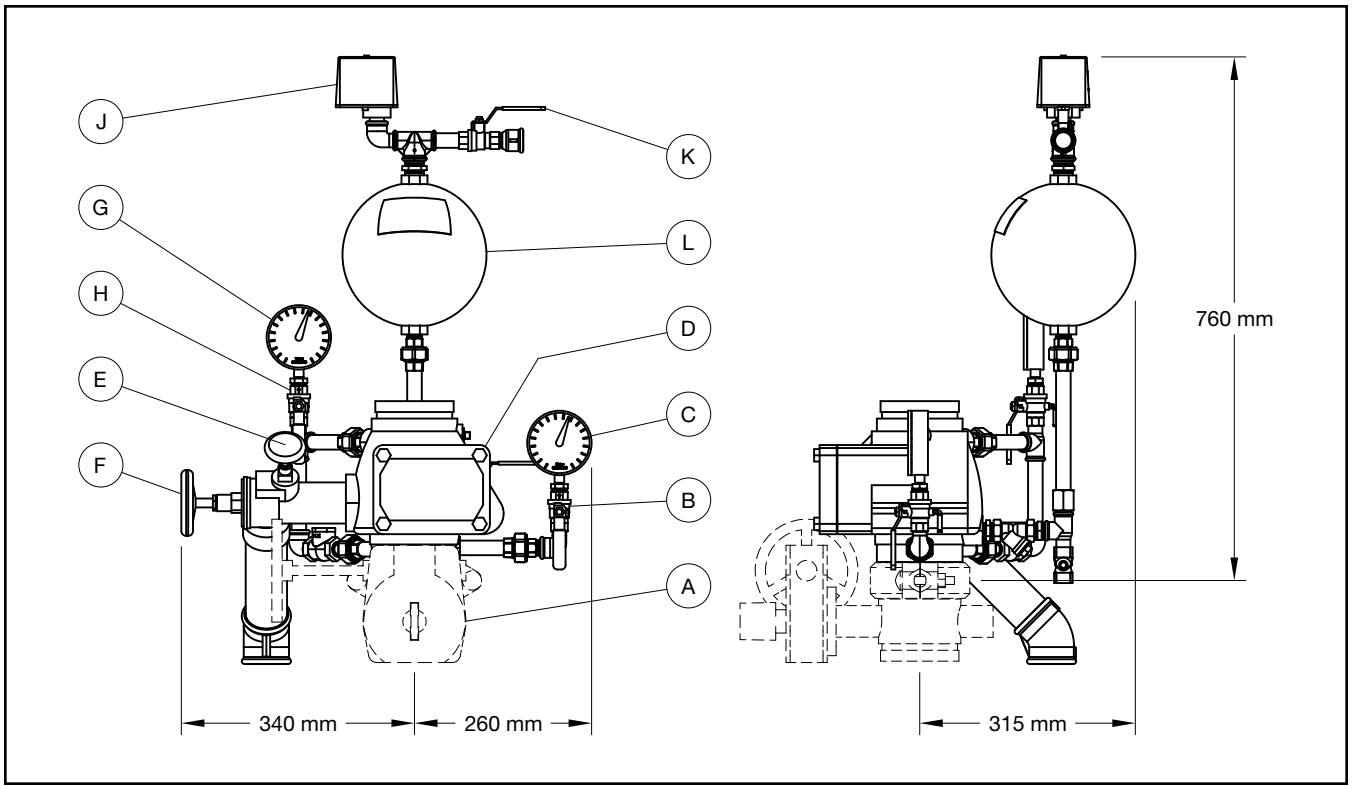

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix H of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN100, With Retarding Chamber (Suitable for Supervisory)

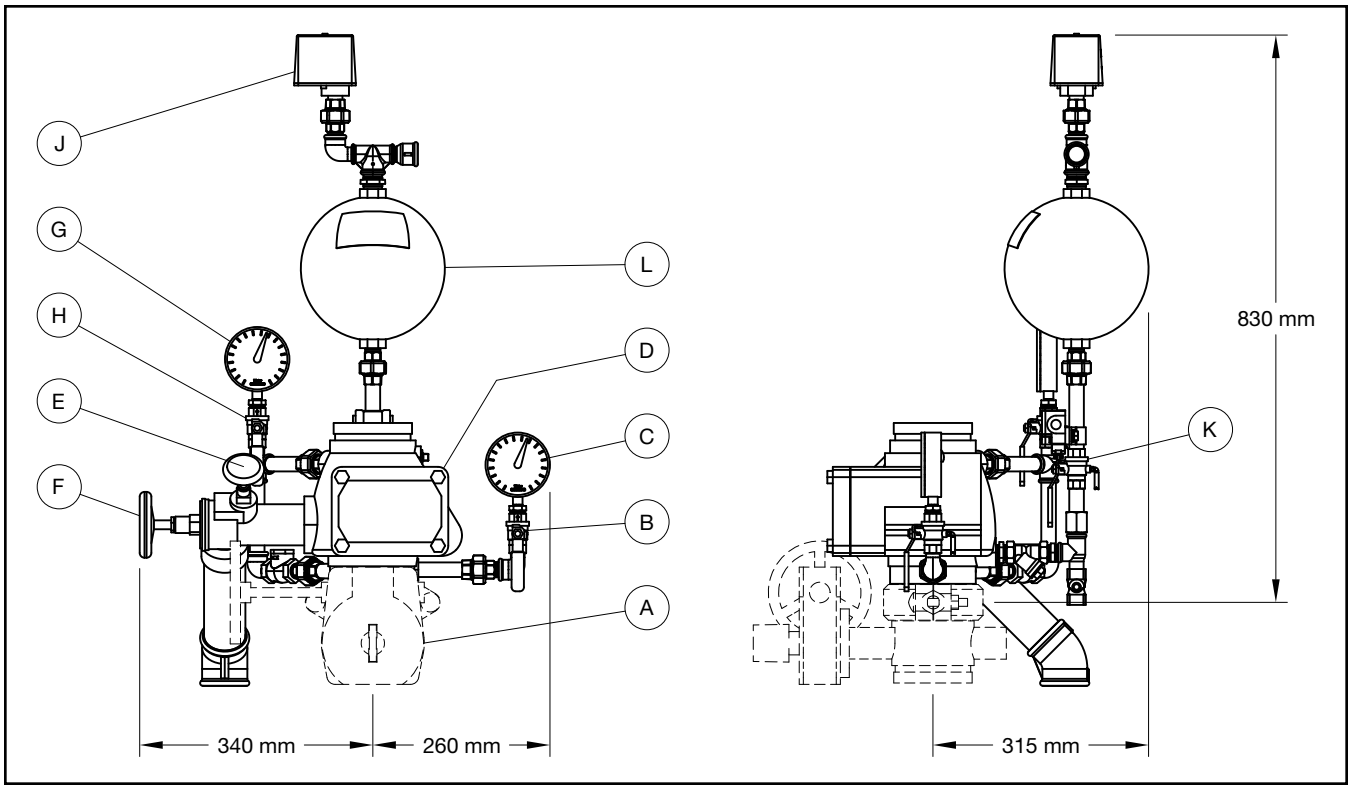

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix J of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN150, Without Retarding Chamber

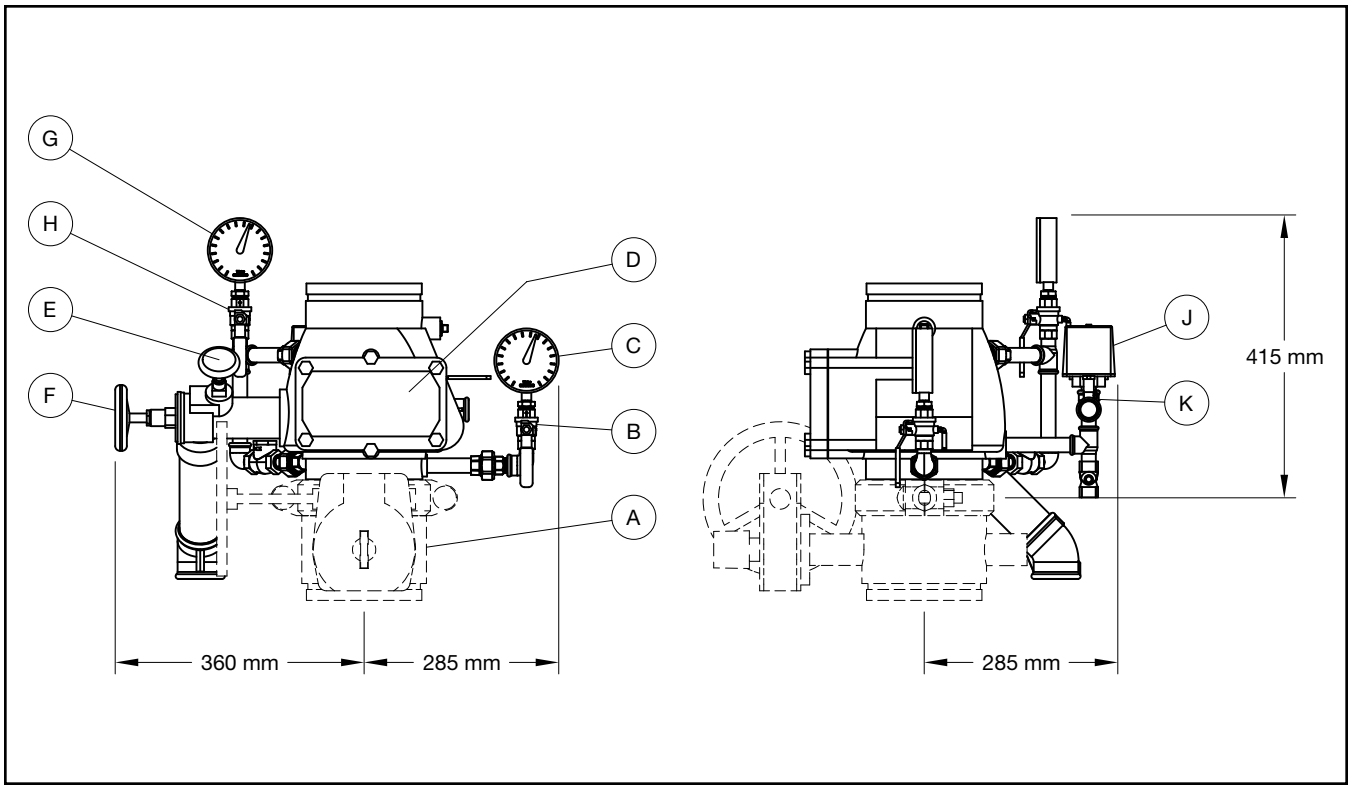

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix K of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN150, Without Retarding Chamber (Suitable for Supervisory)

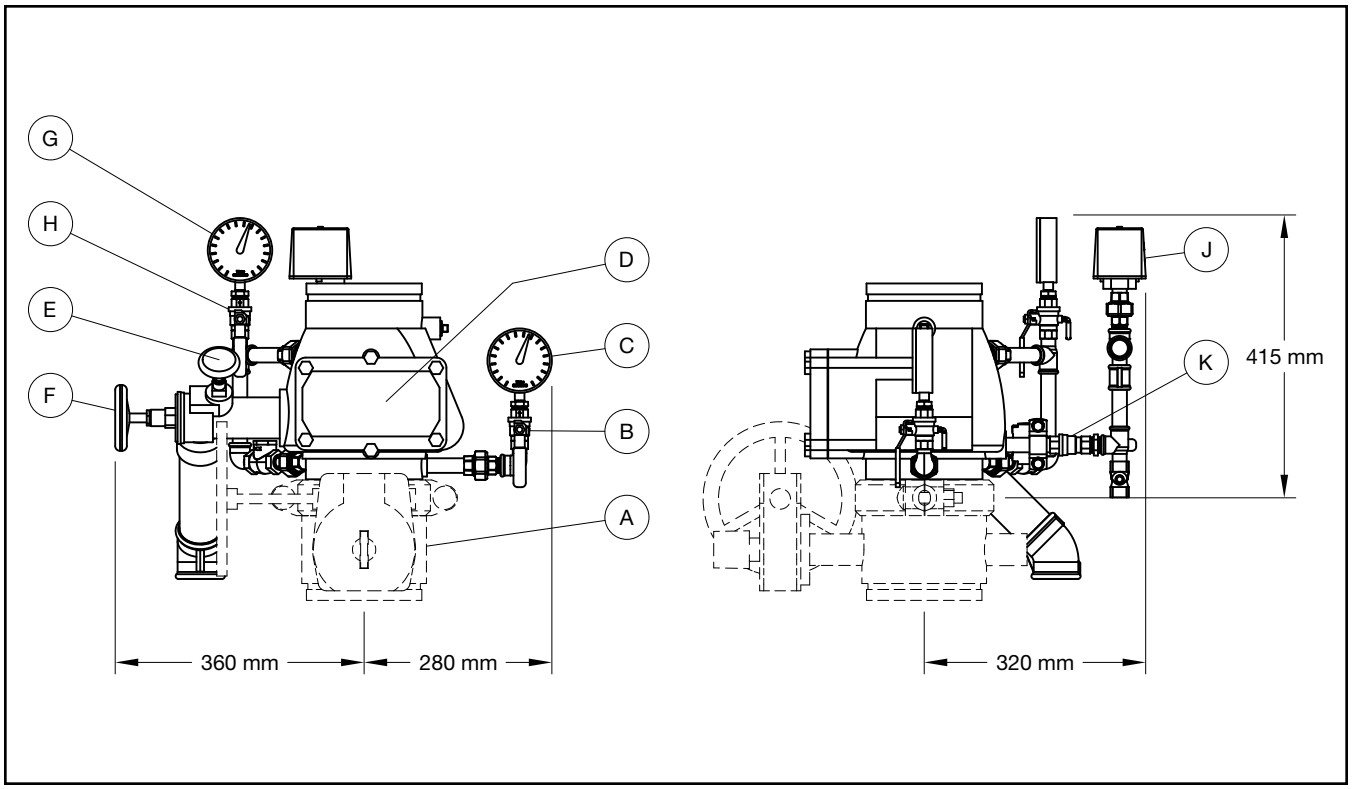

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix L of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN150, With Retarding Chamber

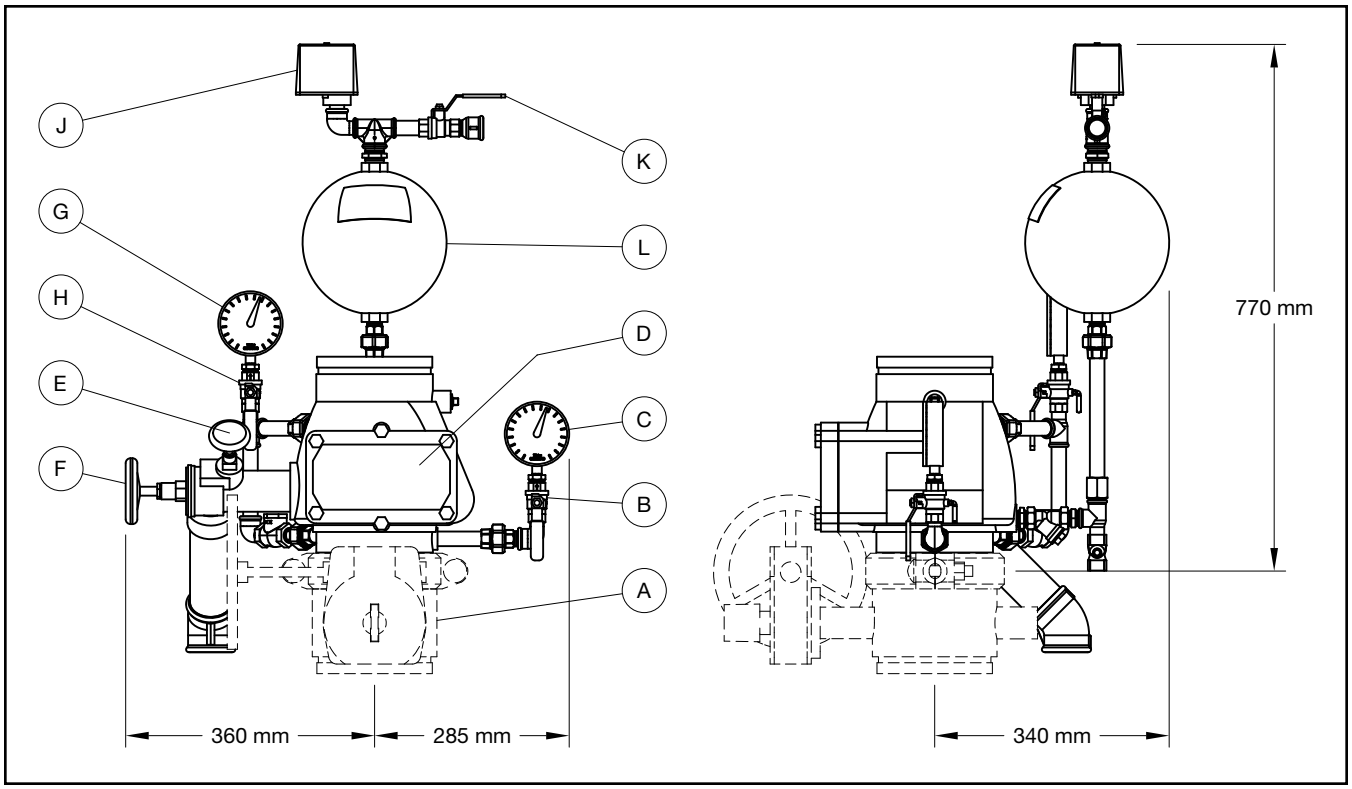

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix M of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN150, With Retarding Chamber (Suitable for Supervisory)

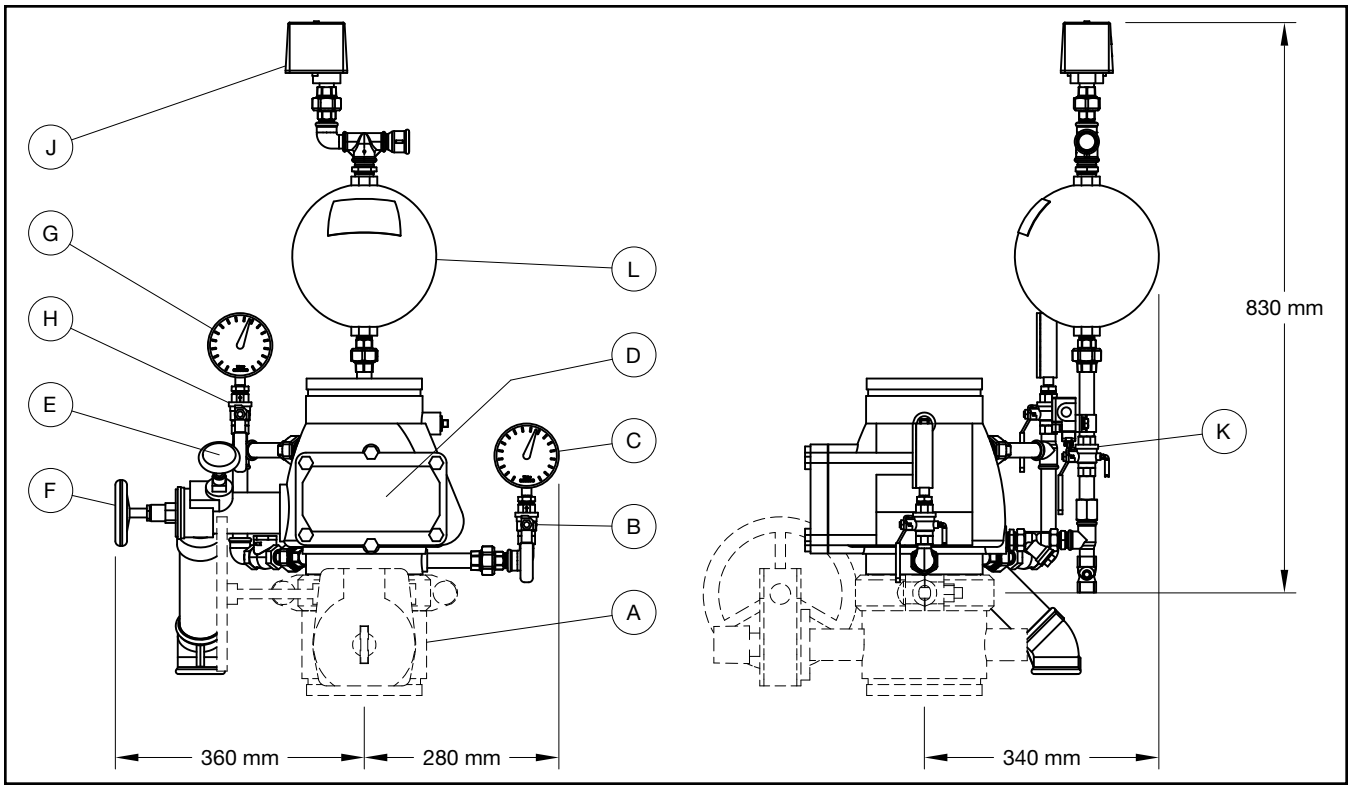

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix N of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN200, Without Retarding Chamber

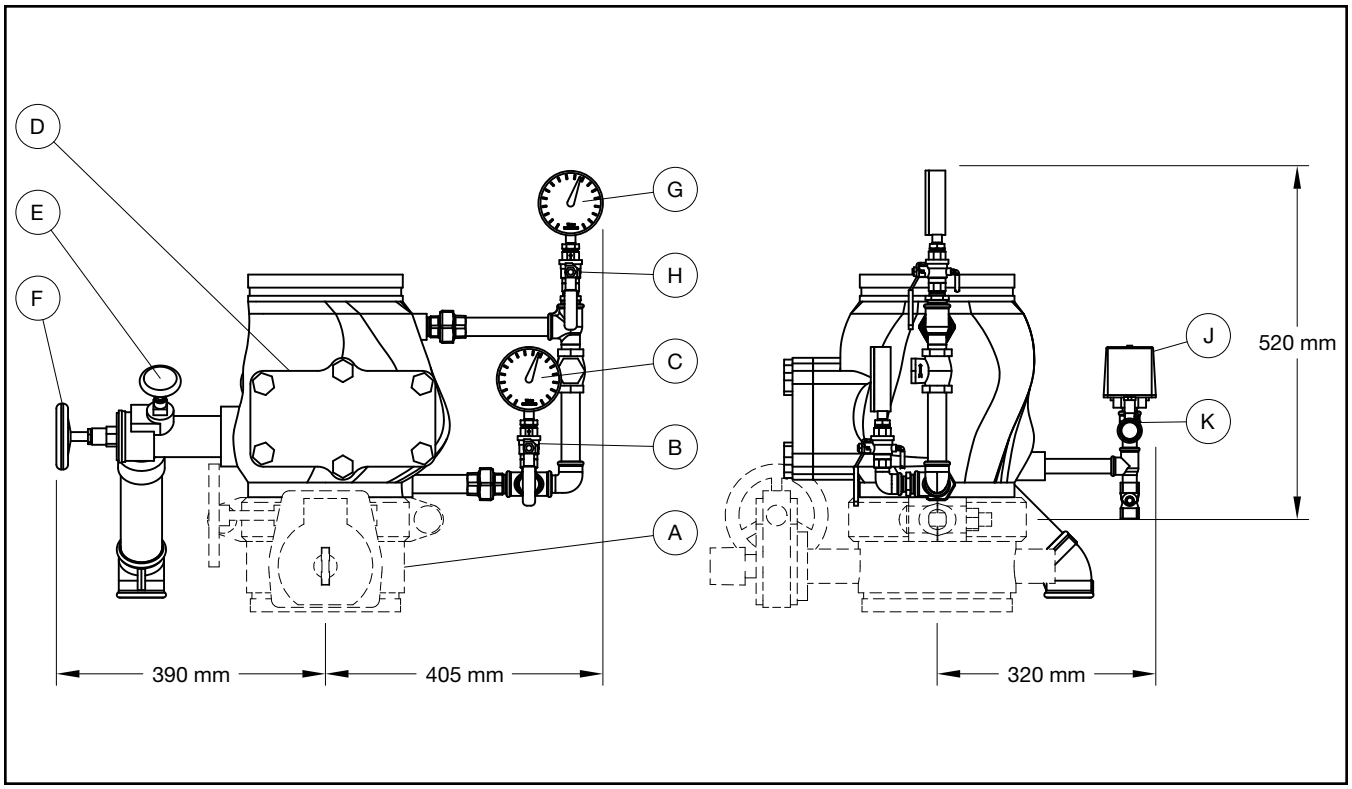

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix P of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN200, Without Retarding Chamber (Suitable for Supervisory)

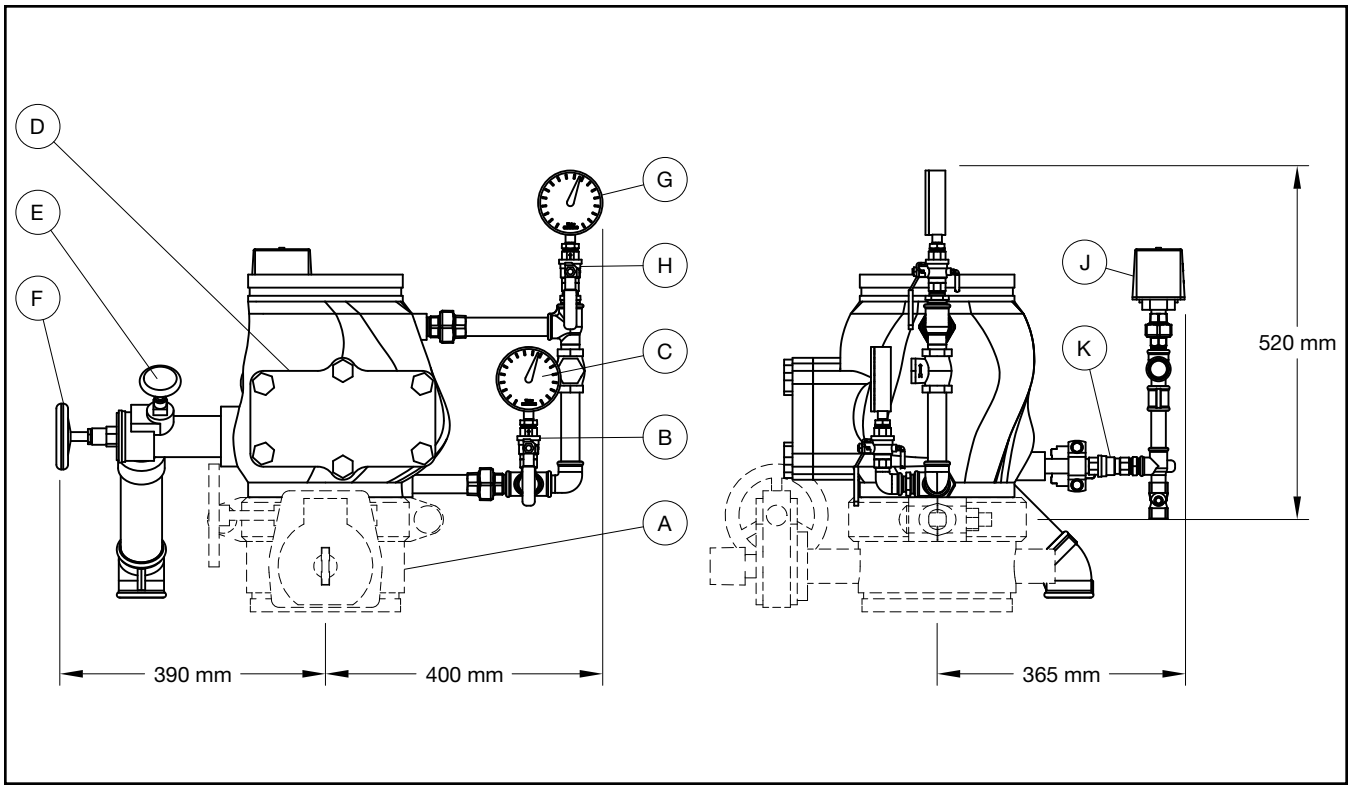

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix Q of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN200, With Retarding Chamber

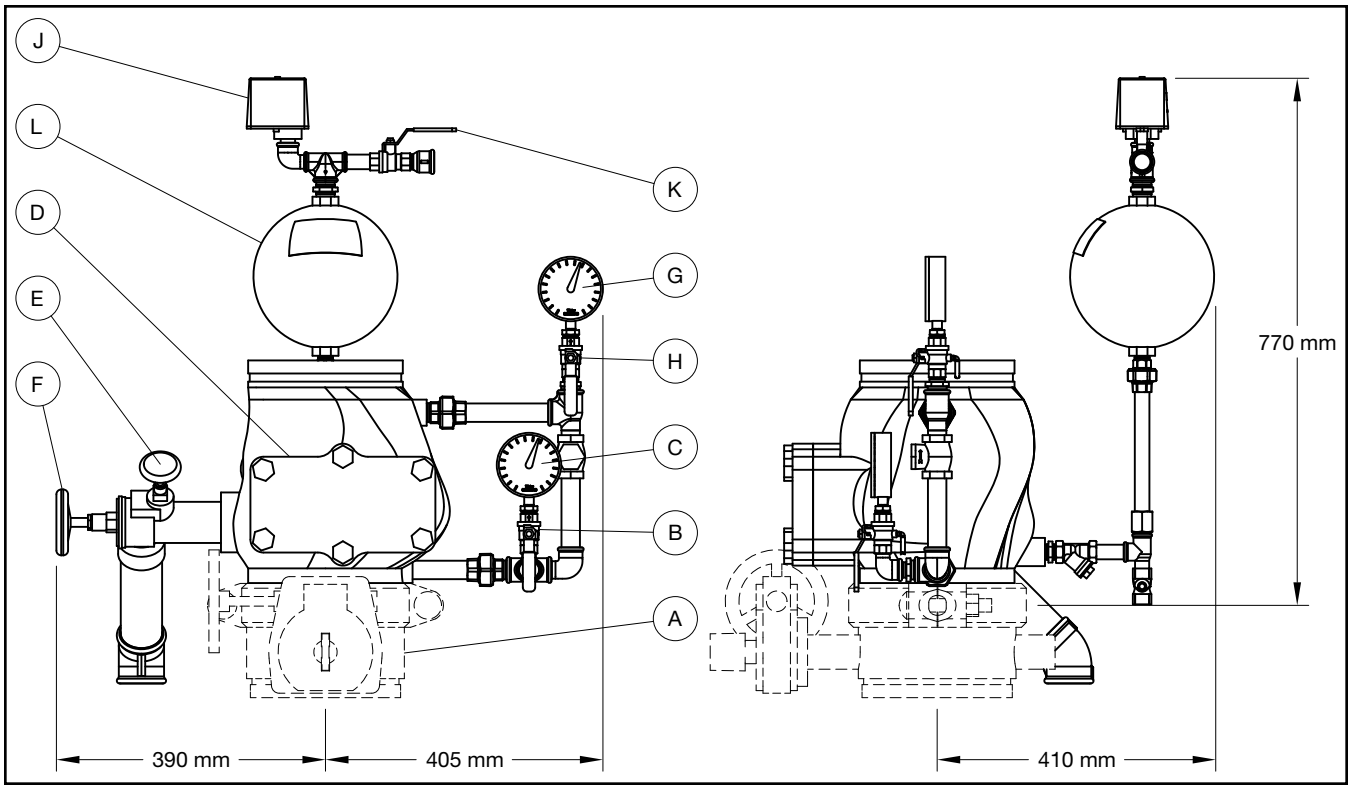

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test


NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.

Appendix R of TFP990 JANUARY 2026
Summary Instructions (If problems occur, consult full document)
Wet Alarm Valve, AV-1-300, DN200, With Retarding Chamber (Suitable for Supervisory)

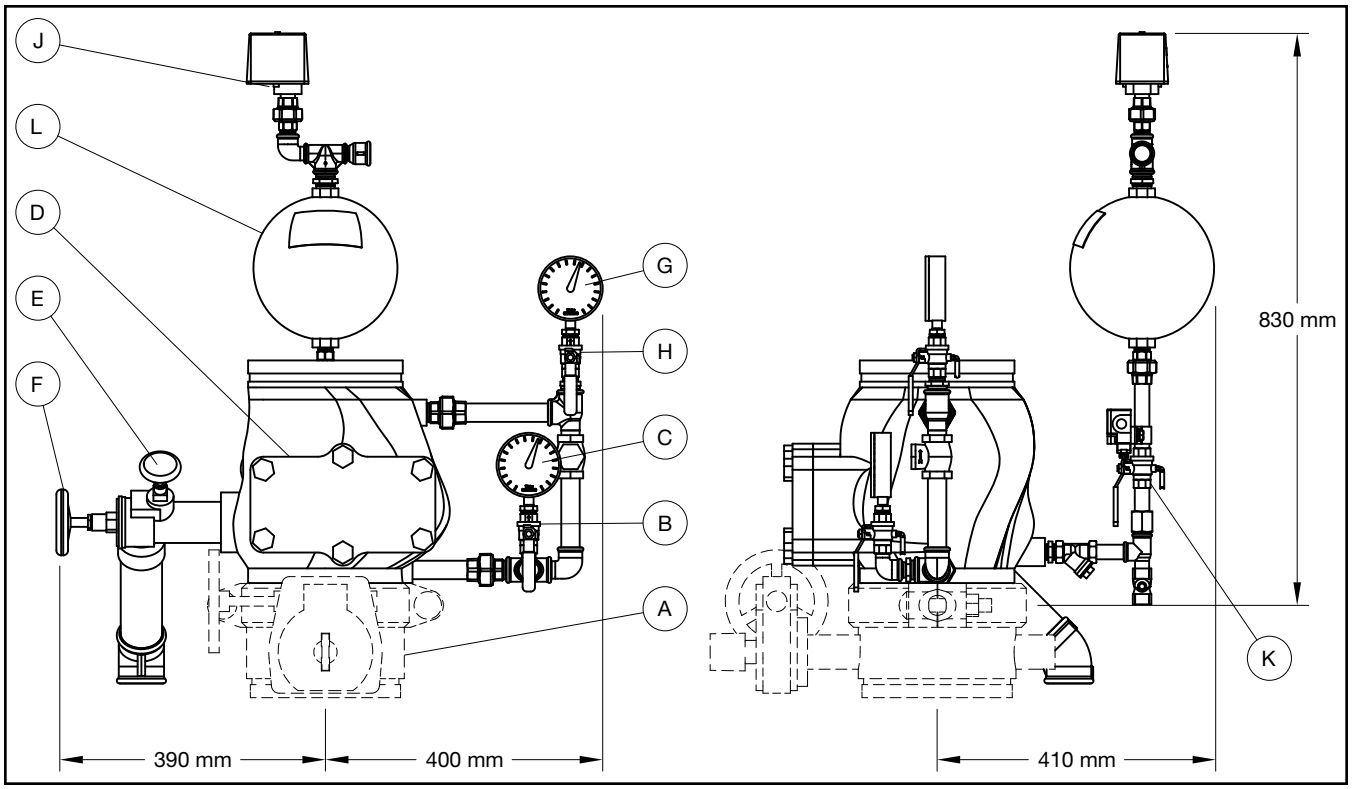

Normal Conditions

- The Main Control Valve (A) is opened and locked.
- The sprinkler system is filled with water and is pressurized.
- The Alarm Test Valve (E) and Main Drain Valve (F) are closed.
- The Water Motor Alarm Control Valve (K) is open.
- The Pressure Gauge Valve (B) is open.
- The Pressure Gauge Valve (H) is open.
- System Pressure Gauge (G) reads downstream pressure.
- Water Supply Pressure Gauge (C) reads upstream pressure.

Operation

When one or more sprinklers are activated, pressure is reduced downstream of the Alarm Valve. This reduction in pressure opens the Clapper in the Alarm Valve and allows water to flow through the alarm port into the alarm line, filling the Model RC-1 Retard Chamber (L) and operating the Waterflow Pressure Alarm Switch (J) and the Water Motor Alarm via the Water Motor Alarm Control Valve (K). The main waterway is now open and water flows into the piping system.

Removing System from Service

Step 1. Close the Main Control Valve (A). Close the Water Motor Alarm Control Valve (K).

Step 2. Drain the system with the Main Drain Valve (F). Open all valves in the system to make sure that cross-mains and branch lines are vented and drained.

Placing the System Back in Service

Step 1. Replace sprinklers that have operated and sprinklers that are close to the fire.

Step 2. Remove the Hand-Hole Cover from the Alarm Check Valve (D). Check and clean the Clapper Facing and Seat Ring.

Step 3. Mount the Hand-Hole Cover.

Step 4. Close Main Drain Valve (F) and other valves in the system.

Step 5. Clean the strainers in the alarm line and the Water Motor Alarm Trim.

Step 6. Open the remote cross-main or branch-line vent connection.

Step 7. Slowly open the Main Control Valve (A) until the sound of flowing water just begins, then open the valve one more turn.

Step 8. Close the remote branch-line vent connection after the discharge of aerated water ceases, and the outlet has flowed fully for at least 15 seconds.

Step 9. Fully open the Main Control Valve (A) and lock it open.

Step 10. Open the Water Motor Alarm Control Valve (K).

Step 11. Reset the fire alarm panel and notify the central alarm station.

Weekly Test

NOTICE

Prior to closing any valves or activating any alarms, notify local security guards and the central alarm station if applicable.

Step 1. Open the Alarm Test Valve (E). Verify that the alarm signal created by the Waterflow Pressure Alarm Switch (J) is visible at the fire panel. If applicable, check the sound of the Water Motor Alarm — it must be clear and steady — and the signal of the supervisory switch.

Step 2. Close the Alarm Test Valve (E). Verify that the normal supply and system pressures are restored. If the supply pressure is below normal, use the instructions from the water supply to obtain the usual pressure.