



TORNATECH

Project: _____

Customer: _____

Engineer: _____

Pump Manufacturer: _____

Technical Data Submittal Document

Model GPD

Diesel Engine Driven Fire Pump Controller

Contents:

Data Sheets
Dimensional Data
Wiring Schematics
Field Connections

Note: The drawings included in this package are for controllers covered under our standard offering. Actual AS BUILT drawings may differ from what is shown in this package.



N.Y.C.
APPROVED



July 2026



Standard, Listings, Approvals and Certifications	Built to NFPA 20 (latest edition)			
	Underwriters Laboratory (UL)	UL218 - Fire Pump Controllers		
	FM Global	Class 1321/1323		
	New York City	Accepted for use in the City of New York by the Department of Buildings		
	CE Mark	Various EN, IEC & CEE directives and standards		
	Built in Canada or U.A.E	Built in Europe		
	☐ CE Mark Option	Supplied as Standard		
Enclosure	Protection Rating			
	Built in Canada or U.A.E	Built in Europe		
	☐ Standard: NEMA 2	☐ Standard: IP55		
	Optional			
	☐ NEMA 12	☐ NEMA 4X-304 sst painted	☐ IP54	
	☐ NEMA 3	☐ NEMA 4X-304 sst brushed finish	☐ IP55	
	☐ NEMA 3R	☐ NEMA 4X-316 sst painted	☐ IP65	
	☐ NEMA 4	☐ NEMA 4X-316 sst brushed finish	☐ IP66	
	<table border="0"> <tr> <td> Accessories • Bottom entry gland plate • Lifting Lugs • Keylock handle </td> <td> Paint Specifications • Red RAL3002 • Powder coating • Glossy textured finish </td> </tr> </table>			Accessories • Bottom entry gland plate • Lifting Lugs • Keylock handle
Accessories • Bottom entry gland plate • Lifting Lugs • Keylock handle	Paint Specifications • Red RAL3002 • Powder coating • Glossy textured finish			
Ambient Temperature Rating	Standard ☐ 4°C to 40°C / 39°F to 104°F Optional ☐ 4°C to 55°C / 39°F to 131°F Controllers built in Dubai, UAE (Tornatech FZE) are supplied standard with 55°C rating.			





General	AC	☐ 120V / 1ph / 60hz ☐ 208V to 240V / 1ph / 50-60hz
	DC	☐ 12VDC ☐ 24VDC
	Grounding system	• Negative
	Battery chargers	• Two independent fully automatic • 10A continuous charge • 500mA trickle charge • Rated for 220AH batteries max
Electrical Reading	• Battery 1 & Battery 2 voltage • Battery 1 & Battery 2 charging amperage • Charging mode	
Pressure Reading	• Continuous system pressure display • Cut-in and cut-out pressure setting	
Pressure and Event Recorder	• Pressure readings with date stamp • Event recording with date stamp • Under regular maintained operation, events are stored in memory for the life of the controller. • Data viewable on operator interface display screen • Downloadable by USB port to external memory device or to App (smartphone application)	



Pressure sensing	• Pressure transducer and run test solenoid valve assembly for fresh water application • Pressure sensing connection 1/2" Female NPT • Drain connection 3/8" • Rated and calibrated for 0-500psi working pressure • Externally mounted with protective cover		
Audible Alarm	Alarm buzzer - 85dB at 3 meters		
Visual Indications	• Engine run • Main switch AUTO • Main switch in OFF • Main switch in HAND • Periodic test • Cranking Cycle • AC Power available • Pump room temperature (°F or °C)		
Visual & Audible Alarms	Visual only • Pump room trouble • Pump on demand • AC Failure • Charger 1 & 2 Failure • Weak battery 1 & 2 • Battery 1 & 2 overvoltage • Loss of continuity 1 & 2 • High fuel level • Fuel tank leak • PLD low suction pressure • High raw water temperature • Low pump room temperature • Service required • ECM warning • Weekly test cut-in not reached • Check weekly test solenoid • Pressure transducer fault • Invalid Cut-In Visual and Audible • Engine trouble • Controller trouble • Engine low oil pressure • Engine high temperature • Engine low temperature • Engine overspeed • DC Failure • Battery 1 & 2 Failure • Engine fail to start • Low fuel level • ECM fault • ECM SS in Alternate Position • Fuel injection malfunction		
Remote Alarm Contacts	DPDT-8A-250V.AC • Engine run • Common controller trouble • Charger #1 & Charger #2 failure • Common engine trouble • High Coolant Temperature • Engine Fail to start • Pneumatic Fail to start • Hydraulic Fail to start • Engine Overspeed • ECM Selector Switch in Alternate Position • ECM Fault • Common pump room trouble (field re-assignable)* • Low fuel level • High fuel level • Fuel tank leak • H-O-A selector switch in OFF or HAND • Free (field programmable)* • Pressure transducer fault • Fuel Injection Malfunction • Engine Low Coolant Temperature • PLD Low Suction Pressure • Battery Failure 1 • Battery Failure 2 • Loss of Continuity 1 • Loss of Continuity 2 • Low pump room temperature • High pump room temperature • Overpressure • Engine Low Oil Pressure • Low Pneumatic Pressure • Low Hydraulic Pressure • High Raw Water Temperature • Low Raw Water Flow • AC Failure		

*Except if option C13 is ordered. Tornatech reserves the right to use any of these four alarm points for special specific application requirements



Terminals for Field Connections for External Devices	• Low fuel level • Remote AUTOMATIC start • Water reservoir low (re-assignable) • Fuel tank leak (re-assignable) • High fuel level (re-assignable)		
ViZiTouch V2.1 Operator Interface	• Embedded microcomputer with software PLC logic • 7.0” color touch screen (HMI technology) • Upgradable software • Multi-language		
Operation	Selector Switch	• Hand-Off-Auto • Behind lockable and breakable cover	
	Automatic Start	• Start on pressure drop • Remote start signal from automatic device	
	Manual Start	• Crank 1 and Crank 2 start pushbuttons • Run test pushbutton	
	Crank Cycle	• 6 consecutive cycle attempts • 3 X 15s crank from battery 1 or 2 alternatively • 15s rest in between each crank attempt	
	Stopping	• Manual with Stop pushbutton • Automatic after expiration of minimum run timer **	
	Timers	Field Adjustable & Visual Countdown	• Minimum run timer ** (off delay) • Sequential start timer (on delay) • Periodic test timer
	Actuation	Visual Indication	• Pressure • Non-pressure
	Mode		• Automatic • Non-automatic
Communication Protocol Capability	• Protocol: Modbus • Connection type: Shielded female connector RJ45 • Frame Format: TCP/IP • Addresses: See bulletin MOD-GPD		

Alarm and shutdown schedule		Automatic Start	Manual or Remote Start	Run Test or Periodic Test
	High Coolant	Alarm only	Alarm only	Shutdown
	Low Oil Pressure	Alarm only	Alarm only	Shutdown
	Overspeed	Shutdown	Shutdown	Shutdown

	Wall Mount		Floor Mount	
Starting Voltage	Approx. shipping dimensions in inches (mm)	Approx. Shipping Weight in Lbs (kg)	Approx. shipping dimensions in inches (mm)	Approx. Shipping Weight in Lbs (kg)
12V.DC	32" l x 29" w x 16" h (813 x 737 x 407)	85 (39)	32" l x 29" w x 26" h (813 x 737 x 661)	115 (52)
24V.DC				

** Automatic shutdown shall be approved by the AHJ.



☐	A1	Periodic test alarm contact (DPDT)
☐	A2	Overspeed alarm contact (DPDT)
☐	A3	Low oil pressure alarm contact (DPDT)
☐	A4	High coolant temperature alarm contact (DPDT)
☐	A5	Failure to start alarm contacts alarm contact (DPDT)
☐	A6	Battery 1 & 2 failure alarm contact (2 x DPDT)
☐	A7	Charger 1 & 2 failure alarm contact (2 x DPDT)
☐	A8	AC failure alarm contact (DPDT)
☐	A9	System overpressure alarm contact (For engines with PLD) (DPDT)
☐	A11	Extra controller trouble alarm contact (DPDT)
☐	A12	Extra engine trouble alarm contact (DPDT)
☐	Ax	Additional engine alarm contact (DPDT) (specify function)
☐	B1	Low fuel level alarm contact (DPDT)
☐	B2	Water reservoir level low alarm contact (DPDT)
☐	B3	Water reservoir empty alarm contact (DPDT)
☐	B4	Low pump room temperature alarm contact (DPDT)
☐	B5	High fuel level alarm contact (DPDT)
☐	B6	Low system (discharge) pressure alarm contact (DPDT)
☐	B7	Low suction pressure alarm contact (DPDT)
☐	B8	Pump on demand alarm contact (DPDT)
☐	B9	Fuel tank leak alarm contact (DPDT)
☐	B10	Main relief valve open alarm contact (DPDT)
☐	B11	Flow meter loop valve open alarm contact (DPDT)
☐	B12	Water reservoir level high alarm contact (DPDT)
☐	B13	High pump room temperature alarm contact (DPDT)
☐	B15	Digital flow test feature complete with access to Pump Curve menu, display of flow rate on main screen and 25ft cable (Option ONLY suitable for connection with Tornatech digital flow meter)
☐	Bx	Additional pump room alarm contact (DPDT) (specify function)

☐	C5	CE Mark with factory certificate
☐	C6	Nickel – cadmium battery chargers (Battery data sheet required)
☐	C7	Engine block heater circuit - 3KW max (same voltage as battery charger primary)
☐	C7A	Engine block heater circuit - 6KW max (same voltage as battery charger primary) Confirm power rating of block heater
☐	C9	Non pressure actuated controller w/o pressure transducer and run test solenoid valve
☐	C13	Louver activation circuit (battery power specific)
☐	C14	Delayed automatic start on AC power failure (factory set at 15 minutes)
☐	C15	Low zone pump control function
☐	C16	Middle zone pump control function
☐	C17	High zone pump control function
☐	C19	Lockout/interlock circuit from equipment installed inside the pump room
☐	D4	Pressure transducer and run test solenoid valve for fresh water rated for 0-500psi (for factory calibration purposes only)
☐	D6	Pressure transducer and run test solenoid valve for sea water rated for 0-500PSI
☐	D7A	Low fuel level float switch supplied as separate item (1-1/4")
☐	D7B	Low fuel level float switch supplied as separate item (1-1/2")
☐	D8A	High fuel level float switch supplied as separate item (1-1/4")
☐	D8B	High fuel level float switch supplied as separate item (1-1/2")
☐	D9A	Anti-condensation heater & thermostat
☐	D9B	Anti-condensation heater & humidistat
☐	D9C	Anti-condensation heater & thermostat & humidistat
☐	D11	Low suction pressure transducer for fresh water rated at 0-300PSI with visual indication and alarm contact
☐	D11A	Low suction pressure transducer for sea water rated at 0-300PSI with visual indication and alarm contact
☐	D12	Tropicalization
☐	D25	Mounting stand

Note: Options chosen from this page are not electrically represented on the wiring schematics in this submittal package.



☐	D25A	Mounting stand SST- 304 painted
☐	D25B	Mounting stand SST- 304 brushed finish
☐	D25C	Mounting stand SST- 316 painted
☐	D25D	Mounting stand SST- 316 brushed finish
☐	D26	Combined low and high fuel level float switch (1-1/4")
☐	D26A	Combined low and high fuel level float switch (1-1/2")
☐	D27	Fuel level probe (2") Level indication
☐	D28A	Field programmable I/O board - 5 Input / 5 output
☐	D30	Redundant pressure transducer for fresh water rated for 0-500PSI
☐	D31	Redundant pressure transducer for sea water rated for 0-500PSI
☐	D32	Modbus with RTU frame format and RS485 connection
☐	D35	Seismic Certification compliant to CBC 2019, IBC 2018 rigid base/wall mounted only
☐	D38	Special Seismic Certification compliant to OSHPD rigid base/wall mounted only

☐	L01	Other language and English (bilingual)
☐	L02	French
☐	L03	Spanish
☐	L04	German
☐	L05	Italian
☐	L06	Polish
☐	L07	Romanian
☐	L08	Hungarian
☐	L09	Slovakian
☐	L10	Croatian
☐	L11	Czech
☐	L12	Portuguese
☐	L13	Dutch
☐	L15	Turkish
☐	L16	Swedish
☐	L21	Danish
☐	L25	Chinese
☐	L28	Finnish
☐	L29	Norwegian


Additional Options:

☐	_____
☐	_____
☐	_____
☐	_____
☐	_____

Note: Options chosen from this page are not electrically represented on the wiring schematics in this submittal package.



ViZiTouch V2.1 Operator Interface

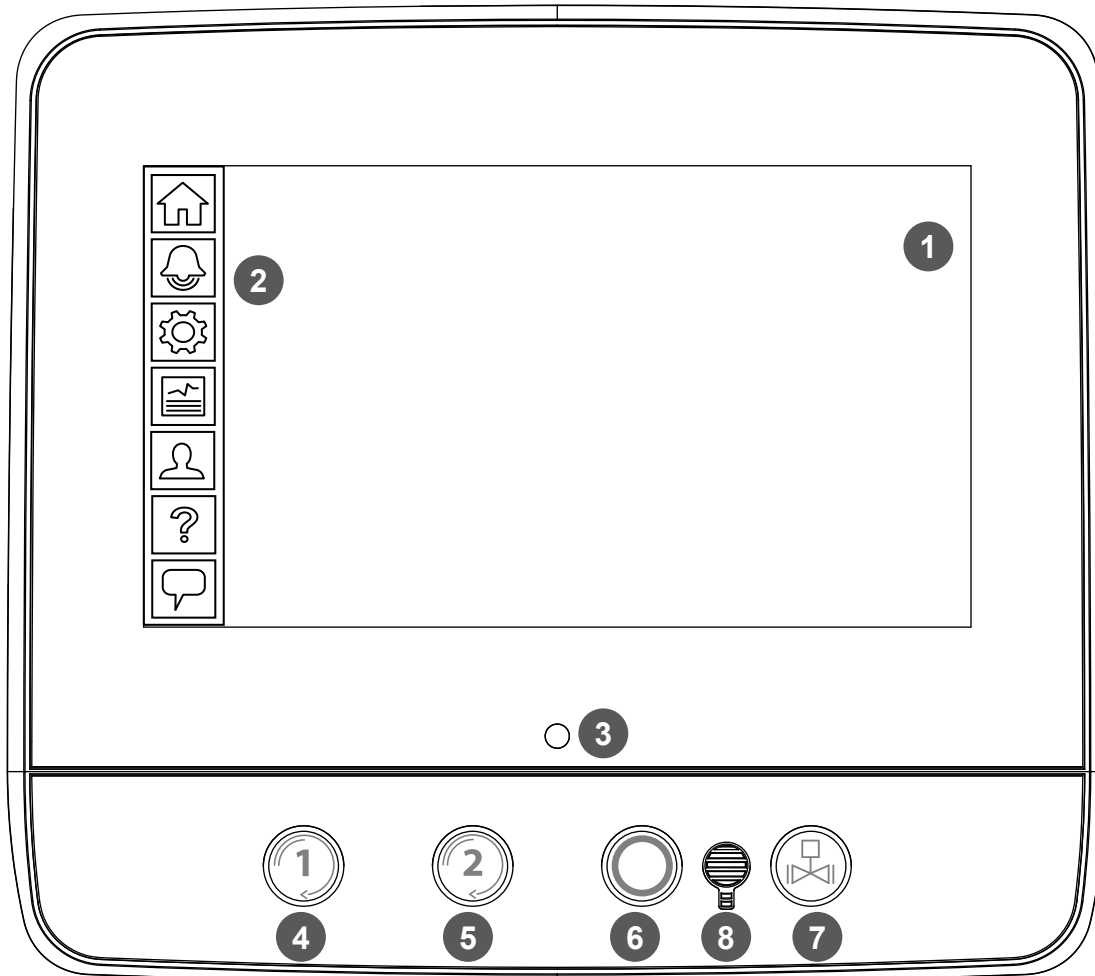

1 - Color touch screen

2 - Onscreen menu

- HOME page
- ALARM page
- CONFIGURATION page
- HISTORY page
- SERVICE page
- MANUAL page
- LANGUAGES page

3 - Power LED (3 colors)

4 - CRANK 1 button

5 - CRANK 2 button

6 - STOP button

7 - RUN TEST button

8 - Alarm buzzer

**TORNATECH**

© Tornatech, Inc. Not for construction.
Subject to change without notice.

BY DD/MM/YY

DRAWN BY ACD 28/02/23

FINAL APPROVAL FC 28/02/23


DIESEL ENGINE FIRE PUMP CONTROLLER 12VDC OR 24VDC NEGATIVE GROUND

MODEL: GPD

BUILT TO THE LATEST EDITION OF THE NFPA20 & NFPA70

THIRD ANGLE
PROJECTION

DRAWING NUMBER
GPD-DI800/E
DWG REV. 0
SHEET 1 OF 1

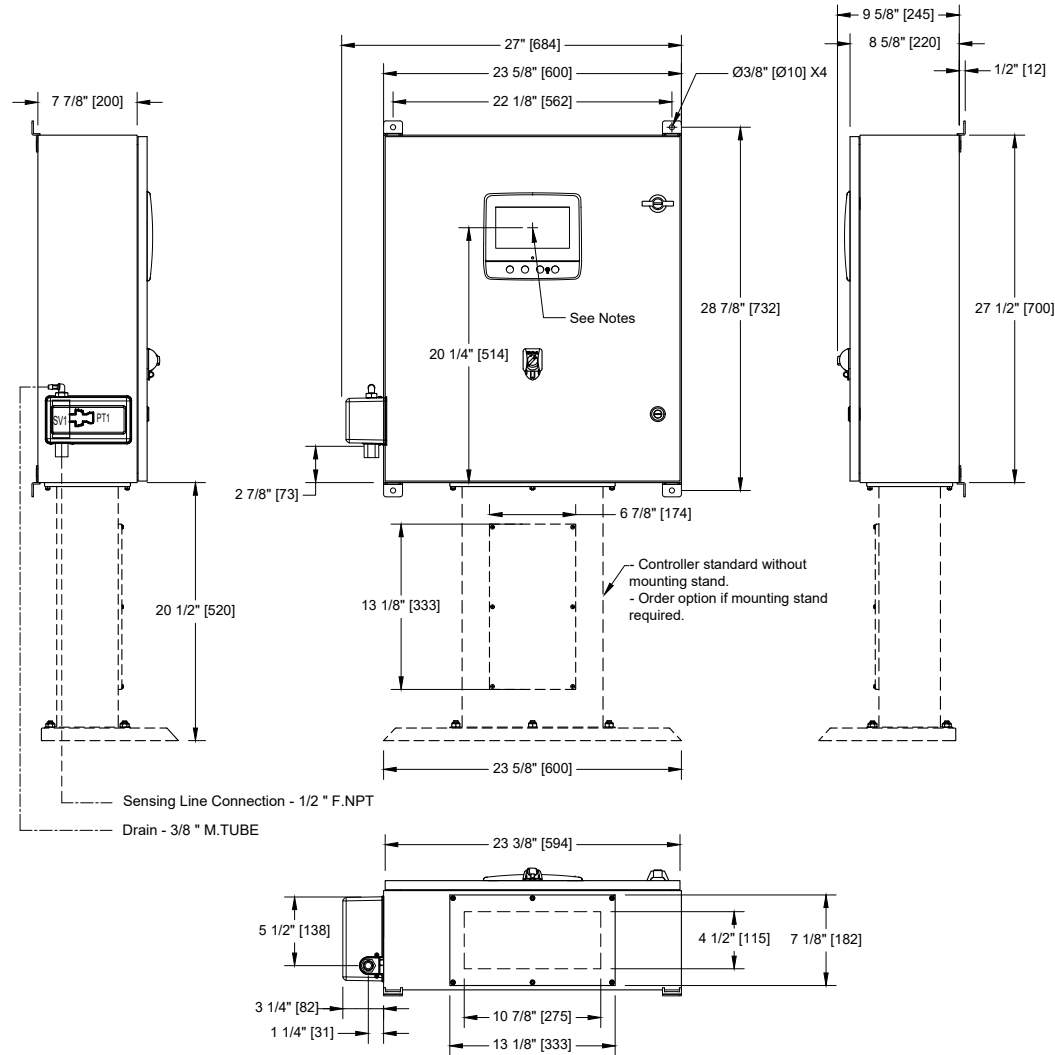**Notes:**

- Standard: NEMA 2
- Standard paint : textured red RAL 3002.
- All dimensions are in inches [millimeters].
- Center of screen: 20-1/4" [514] from bottom (no feet).
- Bottom conduit entrance through removable gland plate recommended.
- Use watertight conduit and connector only.
- Protect equipment against drilling chips.
- Door swing equal to door width.



	BY	DD/MM/YY
DRAWN BY	ACD	28/02/23
FINAL APPROVAL	FC	28/02/23

MODEL: GPD

BUILT TO THE LATEST EDITION OF THE NFPA20 & NFPA70



DRAWING NUMBER	GPD-WS800/E
DWG REV. 0	
SHEET 1 OF 2	





TORNATECH

© Tornatech, Inc. Not for construction.
Subject to change without notice.

BY DD/MM/YY

DRAWN BY ACD 28/02/23

FINAL APPROVAL FC 28/02/23


DIESEL ENGINE FIRE PUMP CONTROLLER 12VDC OR 24VDC NEGATIVE GROUND

MODEL: GPD

BUILT TO THE LATEST EDITION OF THE NFPA20 & NFPA70



DRAWING NUMBER
GPD-WS800/E
DWG REV. 0
SHEET 2 OF 2

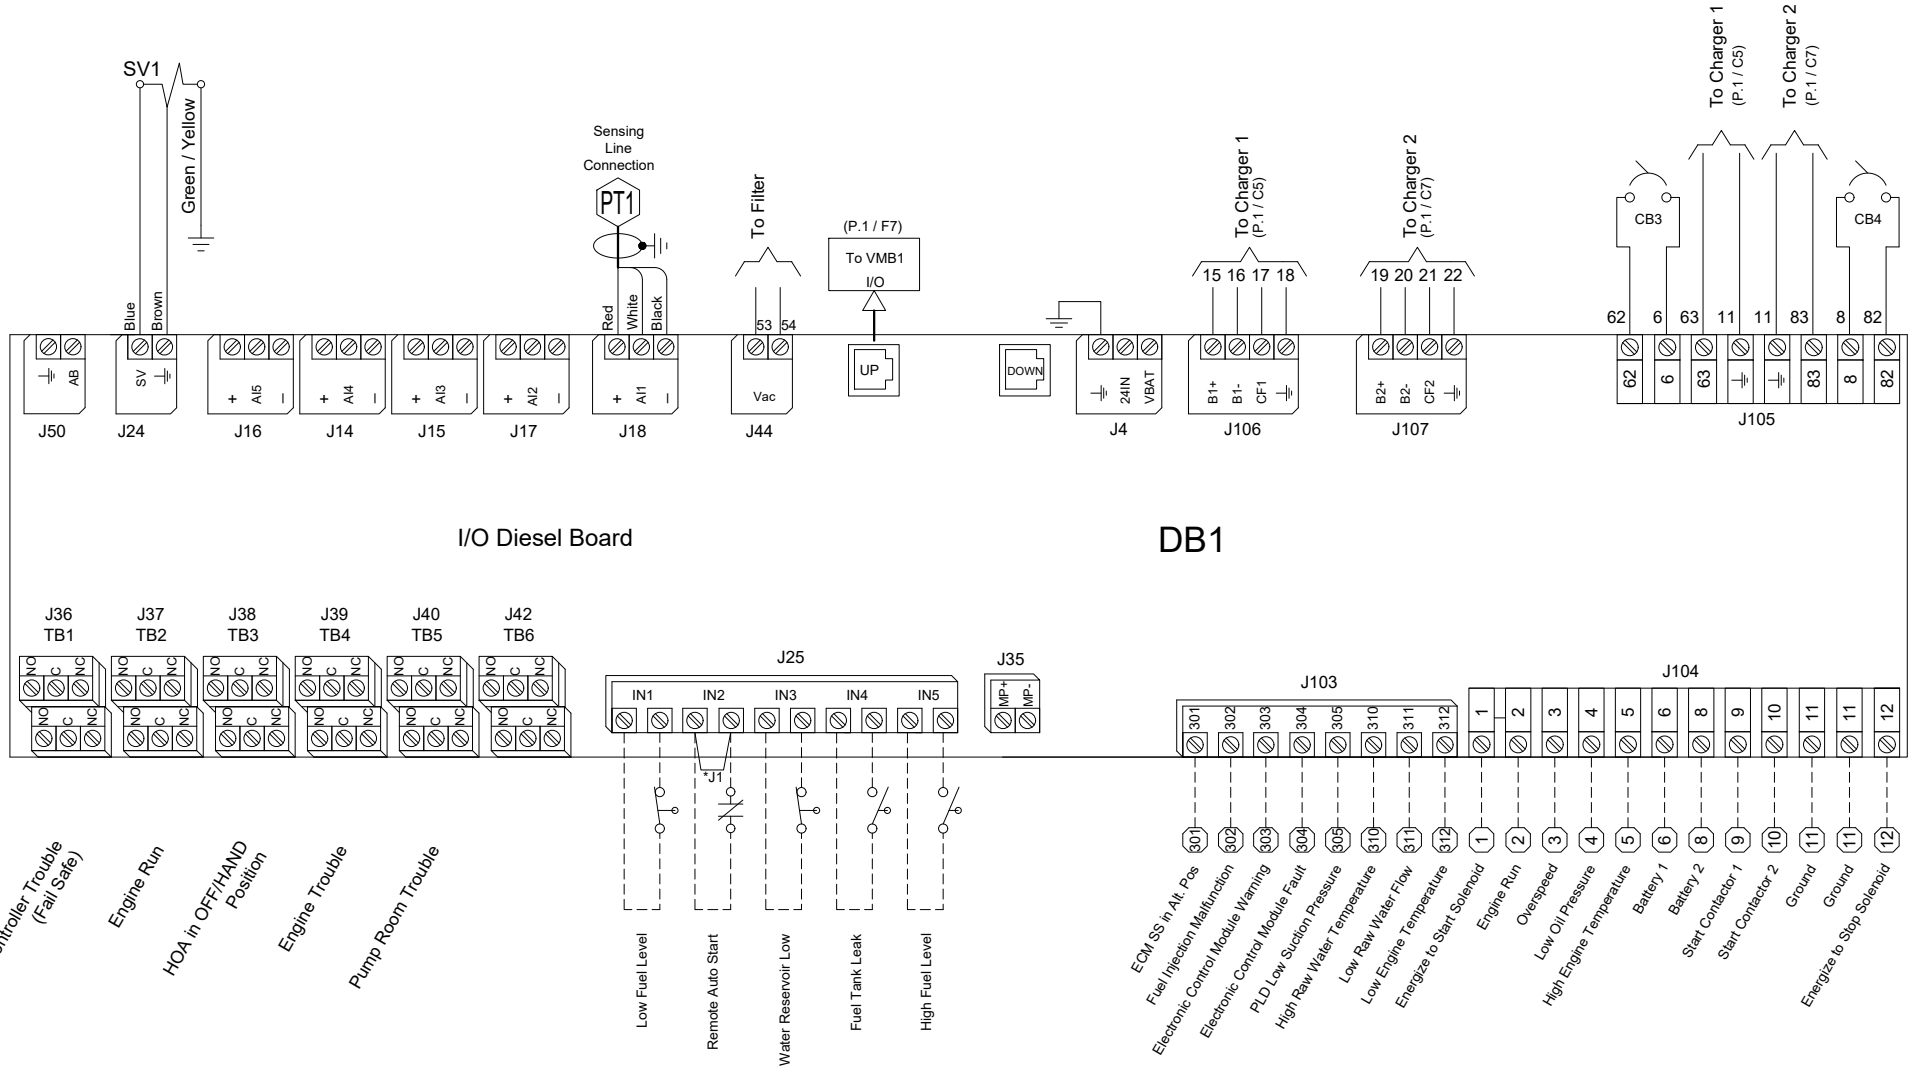

* Remove this jumper to use this feature



TORNATECH

© Tornatech, Inc. Not for construction.
Subject to change without notice.

BY DD/MM/YY


DRAWN BY ACD 28/02/23

FINAL APPROVAL FC 28/02/23

DIESEL ENGINE FIRE PUMP CONTROLLER 12VDC OR 24VDC NEGATIVE GROUND

MODEL:GPD


BUILT TO THE LATEST EDITION OF THE NFPA20 & NFPA70




THIRD ANGLE
PROJECTION

DRAWING NUMBER
GPD-LY800/E
DWG REV. 0
SHEET 1 OF 1

Designation	Description
BC1-BC2	Battery Charger #1 and #2
CB1-2	Magnetic Breaker 1 Pole 10 A
CB3-4	Magnetic Breaker 1 Pole 16 A
DB1	I/O Diesel Board
F1	Filter
IS1	Isolating Switch
SS1	Lockable 3 Position Selector Switch
VMB1	Main Board

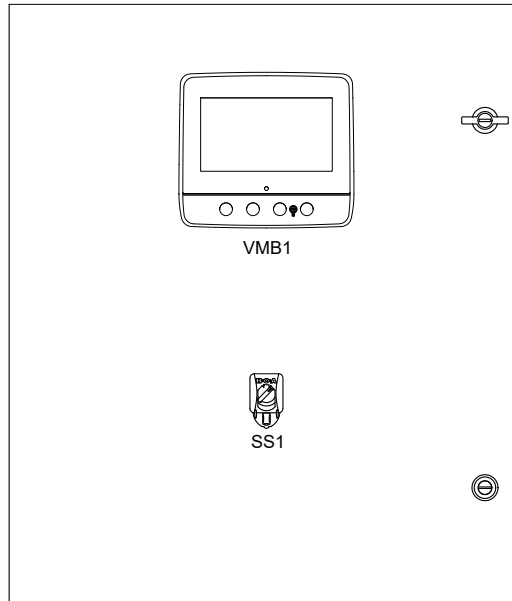

Front Door Layout

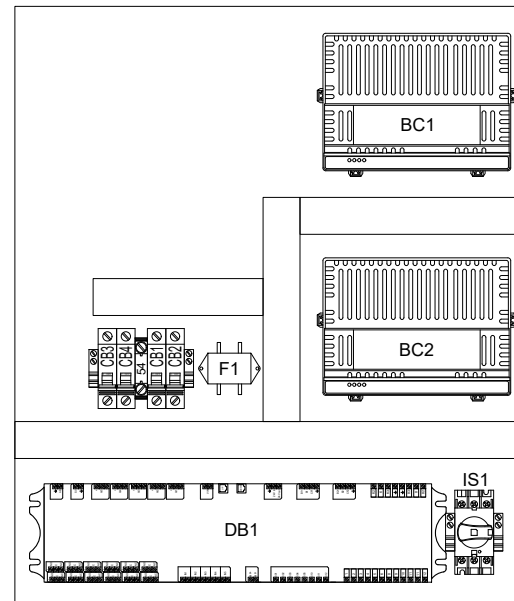

Internal Layout



TORNATECH

© Tornatech, Inc. Not for construction.
Subject to change without notice.

BY		DD/MM/YY
DRAWN BY	ACD	28/02/23
FINAL APPROVAL	FC	28/02/23

DIESEL ENGINE FIRE PUMP CONTROLLER

12VDC OR 24VDC NEGATIVE GROUND

MODEL:GPD

BUILT TO THE LATEST EDITION OF THE NFPA20 & NFPA70




DRAWING NUMBER
GPD-TD800/E
DWG REV. 0
SHEET 1 OF 1

Power Supply

Terminals Wire Size:
14 - 6 AWG
1.8-2 Nm

110-240Vac
50-60Hz

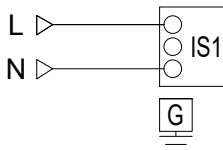


Engine Connections

All wiring between the controller and diesel engine shall be stranded (NFPA20)
Wiring between controller and engine (terminals 301, 302, 303, 304, 305, 310, 311, 312, 2, 3, 4, 5) must be #14AWG as minimum.

Wiring between controller and engine (terminals 12 [rated at 10A or 22A for 20 seconds] 1, 9, 10 [rated at 10A]) must be stranded #10AWG as minimum.

Wiring between controller and engine (terminals 6, 8, 11 [rated at 30A]) must be stranded and sized according to distance.


0-5' (0-1.5m) - 12 AWG (4 mm2)
6-10' (1.8-3m) - 10 AWG (6 mm2)
11-15' (3.3-4.5m) - 8 AWG (10 mm2)
16-20' (4.8-6m) - 2x10 AWG (2x6 mm2)
21-32' (6.4-9.75m) - 2x8 AWG (2x10 mm2)

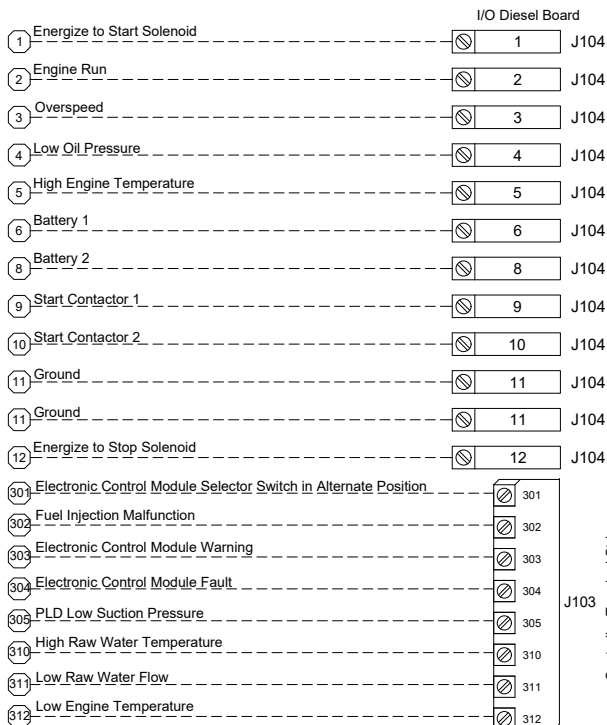

Field Connections

Terminals Wire Size:
24 - 12 AWG
0.5 Nm

Low Fuel Level
Remote Auto Start
Water Reservoir Low
Fuel Tank Leak
High Fuel Level

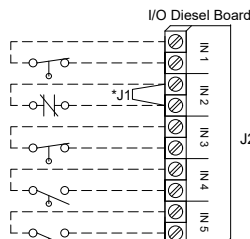

Network Connections

Terminals Wire Size:
Shielded Female Connector RJ45


Modbus TCP/IP

Located on Main Board



Alarm Contacts

Terminals Wire Size:
24 - 12 AWG
0.5 Nm

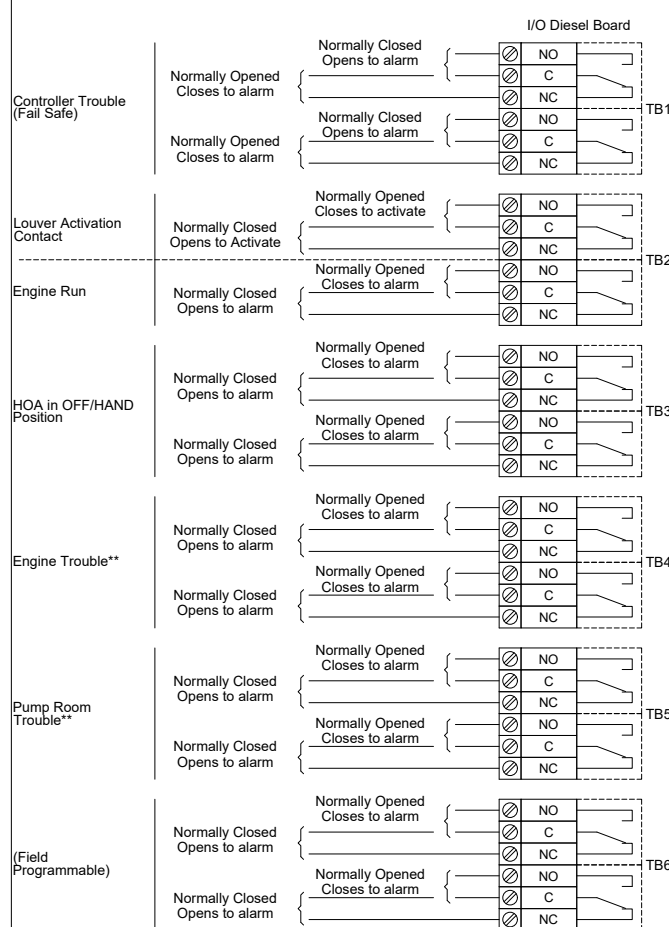

* Remove this jumper to use this feature

** Re-assignable



TORNATECH

© Tornatech, Inc. Not for construction.
Subject to change without notice.

BY

DD/MM/YY

DRAWN BY

ACD

28/02/23

FINAL
APPROVAL

FC

28/02/23

DIESEL ENGINE FIRE PUMP CONTROLLER 12VDC OR 24VDC NEGATIVE GROUND

MODEL:GPD

BUILT TO THE LATEST EDITION OF THE NFPA20 & NFPA70



DRAWING NUMBER

GPD-TD801/E

DWG REV. 0

SHEET 1 OF 1

Located in Controller


Engine Run Alarm Contacts

C-NO


Normally open
Closes to alarm

C-NC

Normally closed
Opens to alarm

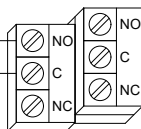

J37
TB2

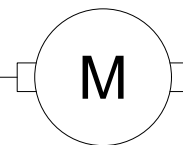

Louvers Motor

Power Supply from a Reliable
External Power Source
(See NFPA20-2016 11.3.2 & A 11.3.2)